



# **DX4000 Digital Video Recorder**



**C2602M-C (3/07)**



# Contents

---

Regulatory Notices .....	7
Description .....	8
Features .....	9
Models .....	9
Overview of the System .....	10
DX4000 Controls .....	11
Controls on the Front Panel of the DX4000 .....	11
Video Control Buttons on the Front Panel of the DX4000 .....	12
Operating the DX4000 from the Remote Control .....	13
Before You Begin .....	14
Starting and Stopping the DX4000 .....	14
Choosing a User Account .....	15
Main Window Overview .....	16
Changing the Display Mode .....	17
Changing the Information Displayed on the Monitor .....	17
Adjusting Menu Settings .....	18
Display Menu .....	18
Record Menu .....	19
Camera Menu .....	20
Audio Menu .....	20
Alarm Menu .....	21
System Menu .....	22
Changing Passwords .....	23
Resetting Passwords .....	24
Factory Default Settings .....	25
Changing the Screen Layout .....	26
Screen Rotation Mode .....	26
Screen View Selection .....	26
Controlling Cameras from the DX4000 .....	27
Pan, Tilt, and Zoom Controls .....	27
Adjusting the Focus or Iris on a Camera .....	27
Working with Presets .....	28
Working with Patterns .....	29
Modifying Camera Settings .....	30
Modifying Audio Settings .....	32
Modifying Image Recording Settings .....	34
Modifying Alarms and Relays .....	35
Creating Recording Schedules .....	37
Setting Up a Recording Schedule .....	37
Setting Up Motion Detection Recording .....	39
Setting Up Alarm-Based Recording .....	41
Monitoring Live Video .....	43
Working with Recorded Video .....	44
Searching for Video .....	44
Playing Recorded Video .....	47
Backing Up Video .....	47
Working with the Remote Agent Application .....	50
About the Remote Agent .....	50

Overview of the Main Screen .....	50
Remote Agent Control Buttons .....	51
Starting and Stopping the Remote Agent .....	51
Configuring the Remote Agent .....	52
Configuring the DX4000 from the Remote Agent .....	53
Recording Settings .....	54
Camera Settings .....	57
Audio Settings .....	58
Alarm Settings .....	59
System Settings .....	60
Controlling Cameras from the Remote Agent .....	62
Monitoring Live Video from the Remote Agent .....	66
Controlling Audio .....	66
Capturing Live Video from the Remote Client .....	66
Working With Recorded Video on the Remote Agent .....	67
Searching for Recorded Video .....	67
Backing Up Video .....	69
Viewing Video With the Backup Player .....	72
About the Web Client .....	74
Starting the Web Client .....	74

# List of Figures

---

1	Connecting Devices to the DX4000	10
2	Connecting Computers Over the Internet	10
3	Front Panel of the DX4000	11
4	Control Buttons on the Front Panel	12
5	Remote Control Operation	13
6	Logging In as the Administrator	14
7	Shutting Down the DX4000	15
8	DX4000 Main Window	16
9	Screen Sequencing Modes	17
10	Adjusting PTZ Options on the Monitor	17
11	Main Menu	18
12	Display Menu	18
13	Record Menu	19
14	Camera Menu	20
15	Audio Menu	20
16	Alarm Menu	21
17	System Menu	22
18	Password Menu	23
19	Changing Passwords	23
20	Factory Default Menu	25
21	Factory Default Reset Warning Message	25
22	Sequence Mode on the DX4000	26
23	Changing Screen Views	26
24	PTZ Control Buttons	27
25	Focus/Iris Controls	27
26	Preset Commands	28
27	Pattern Commands	29
28	Camera Menu	30
29	Status/Title Setup Menu	31
30	Covert/PTZ Setup Menu	31
31	Color Setup Menu	32
32	Audio Menu	32
33	Audio Recording Setup Menu	33
34	Live Audio Setup Menu	33
35	Size/Rec Rate/Quality Menu	34
36	Alarm Menu	35
37	Alarm Input Setup Menu	35
38	Relay Output Setup Menu	36
39	Record Menu	37
40	Timer Recording Setup Menu	37
41	Configuring a Weekly Recording Schedule	38
42	Saving a Weekly Recording Schedule	38
43	Timer Recording Setup Menu	39
44	Motion Detection Setup Menu	39
45	Motion Detection Region Setup Screen	40
46	Selecting Regions for Motion Detection	40
47	Saving Motion Detection Settings	41
48	Record Menu	41
49	Alarm Recording Setup Menu	42
50	Single Mode and Sequencing Mode Video Displays	43
51	Search Login Screen	44
52	Search Menu	44
53	Searching by Date and Time	45
54	Timeline Showing Available Recorded Video	45
55	Results When Searching for Video by Date	45
56	Searching for Video by Event	46
57	Results When Searching for Video by Event	46
58	Video Control Buttons	47
59	Back Up Menu	47

60	Backing Up Video	48
61	Back Up Menu	48
62	Missing Media Warning Message	49
63	List of Backup Video Files	49
64	Backup Progress Messages	49
65	Remote Agent Main Screen	50
66	Remote Agent Settings Screen	52
67	Configuring the DX4000 from the Remote Agent	53
68	Configuring Recording Settings from the Remote Agent	54
69	Timer Recording Setup Screen	55
70	Selecting Partial Regions for Motion Detection	56
71	Configuring Camera Settings from the Remote Agent	57
72	Configuring Audio Settings from the Remote Agent	58
73	Configuring Alarm Settings from the Remote Agent	59
74	Configuring System Settings from the Remote Agent	60
75	Set Password Screen	61
76	Network Client Manager Dialog Box	62
77	PTZ Control Buttons	62
78	Adjusting the Iris	63
79	Setting Up a Pattern	63
80	Completing the Setup for a Pattern	64
81	Setting Up a Preset	64
82	Completing the Setup for a Preset	64
83	PTZ Control Buttons	65
84	Using Preset 95	65
85	Searching for Recorded Video	67
86	Search Log Screen	68
87	Event Viewer Screen	69
88	Remote Agent Backup Screen	70
89	Saving a Snapshot	70
90	DX4000 Backup Player	72
91	Selecting Backup Video	73
92	Authenticating Recorded Video	73
93	DX4000 Web Client	74
94	Web Client Login Dialog Box	75
95	Monitoring Video with the Web Client	75

## List of Tables

A	User Accounts and Access Levels	14
B	Settings for Recording Video	18
C	Image Sizes and Maximum Recording Rates	33

# Regulatory Notices

---

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **RADIO AND TELEVISION INTERFERENCE**

This equipment has been tested and found to comply with the limits of a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes and Modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission's rules.

In order to maintain compliance with FCC regulations shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and television reception.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

# Description

---

The DX4000 Series digital video recorder (DVR) is an entry-level, professional digital video recorder that not only replaces the traditional VCR and multiplexer combination but also offers the benefits derived from the latest in digital video processing.

Designed to work with today's broadband networks, the DX4000 uses MPEG-4 compression, allowing the user the ability to view and control the DVR across a wide area network. Additionally, the smaller file size produced by the MPEG-4 compression standard allows for longer storage times compared with traditional DVR technologies.

With the ability to record at resolutions up to 704 x 480, the DX4000 Series DVR captures crystal clear pictures, creating effective footage for later use and retrieval. With the ability to record up to 120 images per second in CIF resolution (352 x 240 NTSC, 352 x 288 PAL), users can also record full-motion video if desired. Individual adjustments are possible on a per input basis to optimize the DX4000 to meet a given installation's requirements for length of video retention. Video critical for investigation and archiving can be exported easily to a USB flash memory device or an optional CD-RW or DVD-RW.

With the ability to address and control pan, tilt, and zoom (PTZ) equipment such as Spectra® domes and Esprit® positioning systems, the DX4000 becomes a powerful control point for the surveillance requirements of an installation. In addition, with the ability to trigger recording and alarms on motion or external contacts, the DX4000 series becomes an automated monitoring and notification engine as well.

The DX4000 video outputs provide for efficient control and effective deterrence. The choice of VGA, S-Video, or composite main monitor outputs provides flexibility for the user. The main monitor output can be adjusted to display in single screen or quad format. The DX4000's spot monitor can be used for public view applications, providing an effective deterrent to would-be criminals.

Finally, the DX4000 is designed to deliver robust and reliable performance for security professionals. From the ability to capture log entries detailing any faults or user initiated changes to the system, to the inclusion of Pelco's world-renowned customer service promise, the DX4000 embodies the ideal entry-level digital video recorder to protect assets and people.

# Features

---


- 4-channel full duplex digital video recorder
- 4-channel audio inputs with one audio output
- MPEG-4 compression
- Up to 704 x 480 Recording Resolution
- Up to 120 images per second recording rate at 352 x 240 resolution
- Independent channel resolution, quality, and frame rate settings
- Full-function remote agent with administration functions
- Up to 500 GB internal storage
- Support for continuous, motion, and scheduled recording for maximum utilization of hard disk drives
- Local or remote PTZ control via Pelco D and Pelco P protocols
- 4 alarm inputs, 1 relay output
- Main monitor output configurable for multiple-camera displays and for live and playback video
- Spot monitor for public view displays

## MODELS


<b>Model Number</b>	<b>Camera Inputs</b>	<b>Description</b>
DX4004-160	4	4-channel digital video recorder with 160 GB of storage space
DX4004CD-160	4	4-channel digital video recorder with CD-RW and 160 GB of storage space
DX4004DVD-160	4	4-channel digital video recorder with DVD-RW and 160 GB of storage space
DX4004-250	4	4-channel digital video recorder with 250 GB of storage space
DX4004CD-250	4	4-channel digital video recorder with CD-RW and 250 GB of storage space
DX4004DVD-250	4	4-channel digital video recorder with DVD-RW and 250 GB of storage space
DX4004-500	4	4-channel digital video recorder with 500 GB of storage space
DX4004CD-500	4	4-channel digital video recorder with CD-RW and 500 GB of storage space
DX4004DVD-500	4	4-channel digital video recorder with DVD-RW and 500 GB of storage space

# Overview of the System

The DX4000 serves as the center of a video surveillance system to which many computers can be connected. Figure 1 illustrates that computers can be connected either directly to the DX4000 or remotely over a network. Figure 1 shows the maximum number of cameras and alarm sensors that can be connected to the DX4000. Note also that monitors can be connected to the system and can be placed in key locations to view live video for individual cameras. Three types of backup devices can be connected to the DX4000: a writable CD drive, a writable DVD drive, and a USB flash memory device. Refer to Figure 2 for an example of how computers can be connected to the DX4000 over the Internet.

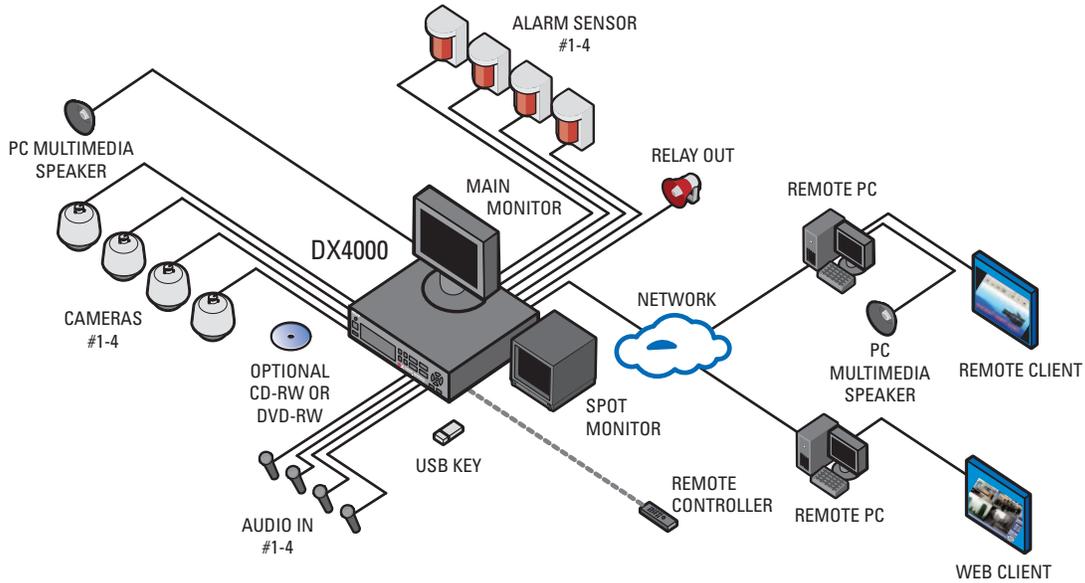

**Figure 1.** Connecting Devices to the DX4000

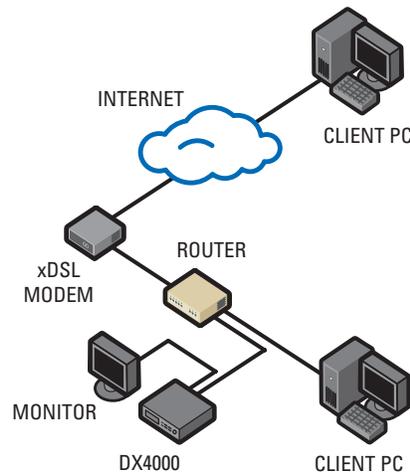

**Figure 2.** Connecting Computers Over the Internet

# DX4000 Controls

## CONTROLS ON THE FRONT PANEL OF THE DX4000


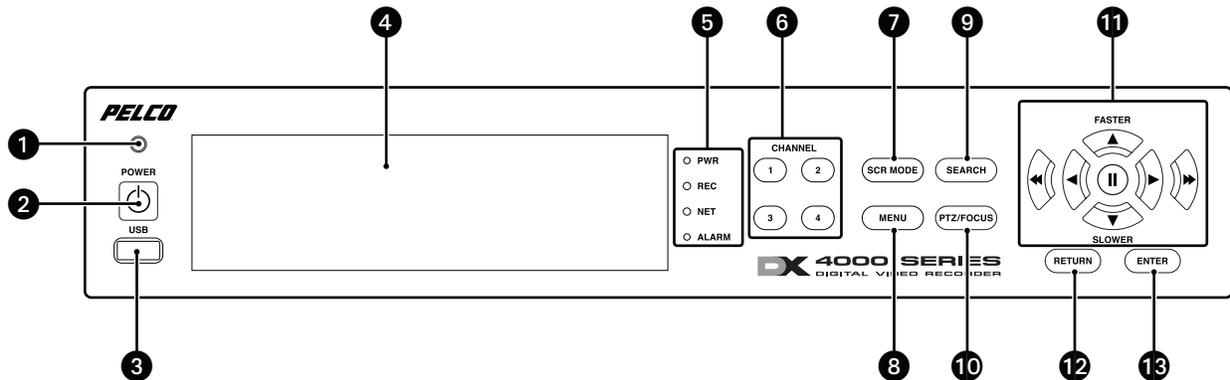


Figure 3. Front Panel of the DX4000

The buttons on the front panel of the unit are used to control PTZ and camera focus, to enter menus and adjust settings on the DX4000, and to search for and play back video. Refer to Figure 3 for the locations of the buttons on the front panel.

- ❶ **Remote control sensor input:** Receives data from the remote control.
- ❷ **Power:** Turns the unit on or off.
- ❸ **USB Port:** Connects a USB flash memory device to back up video.
- ❹ **CD-RW or DVD-RW:** Stores backup copies of recorded video on a writable compact disc or writable digital video disc (available on certain models).
- ❺ **Unit status indicators:** Indicates operating status as follows:
  - PWR:** The system is on or off.
  - REC:** The system is recording.
  - NET:** The remote agent is connected to the client network connection status.
  - ALARM:** alarm sensor detection status.
- ❻ **Channel selection buttons:** Selects a channel (1-4) or lets you input a password.
- ❼ **SCR mode:** Selects the screen layout mode or video sequencing mode.
- ❽ **Menu:** Opens the system menus.
- ❾ **Search:** Starts the search mode for data searches.
- ❿ **PTZ/Focus:** Accesses the PTZ/FOCUS controls for a camera.
- ⓫ **Control buttons:** Navigate through menu options or control recorded video. Refer to *Video Control Buttons on the Front Panel of the DX4000* on page 12 for a description of the buttons.
- ⓬ **Return:** Cancels a setup operation or returns you to a previous menu or mode.
- ⓭ **Enter:** Applies any changes that you enter and accesses selected menus.

## VIDEO CONTROL BUTTONS ON THE FRONT PANEL OF THE DX4000

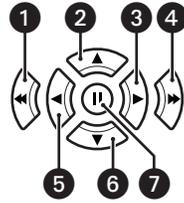


**Figure 4.** Control Buttons on the Front Panel

Several control buttons are located on the front panel of the DX4000. Use these buttons to navigate through menus, to control PTZ and focus on cameras, and to search for and play back video. The control buttons perform the following functions when you are playing back recorded video:

- ❶ **Fast reverse:** Plays the video backward at a fast speed.
- ❷ **Increase forward or reverse:** Increases the speed of the current play direction (forward or reverse).
- ❸ **Play forward:** Plays the video forward.
- ❹ **Fast forward:** Plays the video forward at a fast speed.
- ❺ **Play reverse:** Plays the video in reverse.
- ❻ **Decrease forward or reverse:** Decreases the speed of the current play direction (forward or reverse).
- ❼ **Pause:** Stops the video and displays the current frame of the video.

## OPERATING THE DX4000 FROM THE REMOTE CONTROL

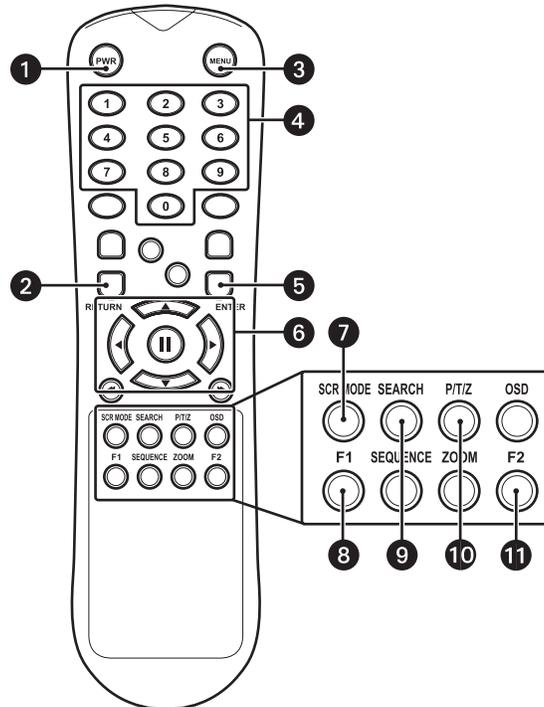

**Figure 5.** Remote Control Operation

Instead of controlling the DX4000 with the buttons on the front panel of the unit, you can use the remote control to operate PTZ functions or focus cameras, to enter menus and adjust settings on the DX4000, and to search for and play back video. Refer to Figure 5 for the locations of the buttons on the remote control.

- 1 Power button:** Turns the system on or off.
- 2 Return button:** Cancels setup commands or returns to a previous menu.
- 3 Menu button:** Opens the main menu.
- 4 Channel selection buttons:** Selects the available channels (up to a maximum of four) or user passwords.
- 5 Enter button:** Applies any configuration changes made to the DX4000, and accepts any menu or command selections.
- 6 Direction control buttons:** Controls playback options, menu navigation, and PTZ or focus controls. Buttons include up, down, left, right, and pause.
- 7 Screen mode button:** Changes the screen display between a single screen and four video panes (quad view).
- 8 F1:** Creates a preset action.
- 9 Search button:** Opens the search dialog box.
- 10 PTZ/Iris mode:** Places the camera in PTZ or focus mode.
- 11 F2:** Selects a preset action.

# Before You Begin

---

This manual describes the menus on the DX4000; how to control PTZ movement and focus cameras; and how to search for, play back, and back up video directly from the DX4000. It also describes how to operate the DX4000 from a remote agent application installed on a computer, how to view live video from a web client, and how to review backed up video from the backup player. For information on installing and configuring the DX4000, installing the remote agent application, and installing the web client, refer to the DX4000 Installation manual.

## STARTING AND STOPPING THE DX4000

Each time you start the DX4000, you must log on to the system as one of the default users that are provided with the unit. The first time you start the DX4000, you should log on as the administrator so that you can access the menu options to configure the unit. Each time you try to access the menu options, you will be prompted to select a user ID and enter a password. If you access the system from the remote agent application, you can log on with the other user accounts: manager or operator. The default password for all users is 1234. For information on how to change a password, refer to *Changing Passwords* on page 23.

**NOTE:** If you attempt to access a protected function, you will be prompted to enter the appropriate user ID and password.

A maximum of four users may be logged on simultaneously. If a user logs on to the system with the same user ID from the remote agent application while someone else is already logged on, the first person will be logged out of the system automatically. A second person may log on to the system with the manager or operator user ID from the web client without interrupting another user's session on the remote agent application.

### To start the DX4000

1. Press the power button on the front panel of the DX4000, or on the remote control, if the unit is not already running. The Setup screen appears and the Administrator user is selected.
2. If desired, press the up or down arrow to select a different user ID. You can choose Administrator, Manager, or Operator. Refer to *Choosing a User Account* on page 15 for a description of permissions for each user ID.
3. Press the numbered channel buttons to enter your password, and then press the Enter button. Unless it has been changed, the default password is 1234.



**Figure 6.** Logging In as the Administrator

## To stop the DX4000

1. Press the power button on the front panel of the DX4000 or on the remote control. The unit beeps and displays the Shutdown screen.
2. Press the numbered channel buttons to enter your password, and then press the Enter button. The unit shuts down all attached devices and then turns off.



**Figure 7.** Shutting Down the DX4000

## CHOOSING A USER ACCOUNT

The DX4000 provides user accounts for an administrator, manager, and operator. Each of these user accounts has different levels of access to the system. If you attempt to access a protected function, you will be prompted to enter a different user ID and password. Access varies slightly when you are logged on from the remote agent. The following table describes the access levels for each user account on the DX4000 and from the remote agent. Note that while logged on to the DX4000 from the web client, the only access that is available is to view live video.

**Table A.** User Accounts and Access Levels

User Account	DX4000	Remote Agent
Operator	<ul style="list-style-type: none"> <li>• View live video</li> <li>• Change the display</li> <li>• Control cameras (PTZ, focus, and iris)</li> </ul>	<ul style="list-style-type: none"> <li>• View live video</li> <li>• Change the display</li> <li>• Control cameras (PTZ, focus, and iris)</li> <li>• Adjust color</li> <li>• Control audio</li> <li>• Save live video to the local drive</li> <li>• Change connection settings</li> </ul>
Manager	<ul style="list-style-type: none"> <li>• All operator access</li> <li>• Back up video to CD, DVD, or USB flash memory</li> <li>• Search for recorded video</li> </ul>	<ul style="list-style-type: none"> <li>• All operator access</li> <li>• Search for recorded video</li> <li>• Record live video manually</li> <li>• Back up recorded video to the hard disk</li> </ul>
Administrator	<ul style="list-style-type: none"> <li>• All manager and operator access</li> <li>• Back up video to CD, DVD, or USB flash memory</li> <li>• Configure the DX4000</li> </ul>	<ul style="list-style-type: none"> <li>• All manager and operator access</li> <li>• Back up recorded video to a CD, DVD, or USB flash memory, or to the hard disk</li> <li>• Configure the DX4000</li> </ul>

# Main Window Overview

---

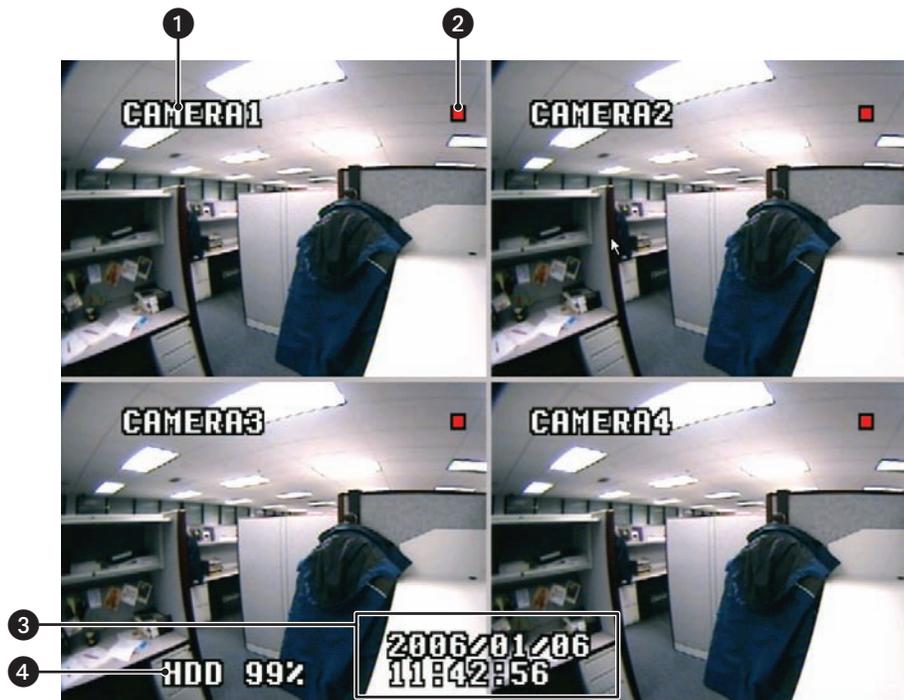


Figure 8. DX4000 Main Window

The DX4000 main screen provides access to current system information.

- ❶ **Camera title:** Displays the name of the camera. The camera title is displayed for each camera that is connected to the DX4000.
- ❷ **Recording status:** Indicates that the camera is being recorded. A red square means the camera is being recorded; green means the camera is prerecording video into a buffer. The recording status appears for each camera that is connected to the DX4000.
- ❸ **Date and time:** Indicates the current date and time when viewing live video. This information changes when viewing recorded video.
- ❹ **Hard disk status:** Indicates the estimated amount of storage space used on the hard disk.

## CHANGING THE DISPLAY MODE

The display mode on the DX4000 is preset to display all four channels simultaneously. You can change this screen sequencing mode to display a single, full-screen video pane or to sequence between all four channels on the screen.



**Figure 9.** Screen Sequencing Modes

### To change the screen sequencing mode

1. Press the SCR Mode button on the DX4000. The display changes to a single-channel display.
2. Continue pressing the SCR Mode button until the selected display type appears. Options are quad (four channels), single (one channel), or sequencing (rotate among all channels). If you choose sequencing, you should also select the sequence dwell time that each channel will be displayed. Refer to *Display Menu* on page 18 for a description of sequence dwell time.

To view a specific channel, press one of the four channel buttons on the DX4000. You can also use the remote control to select a channel. Refer to *Operating the DX4000 from the Remote Control* on page 13 for a description of the buttons on the remote control. You can also use the remote agent application to control the DX4000 display from a computer. Refer to *Working with the Remote Agent Application* on page 50 for additional information.

## CHANGING THE INFORMATION DISPLAYED ON THE MONITOR

To change which information is displayed on each video pane, adjust the settings from the DX4000 menus. Press the buttons on the front panel of the DX4000 to access menus and to navigate through them. Refer to *Controls on the Front Panel of the DX4000* on page 11 for a description of each button.

For example, pressing the PTZ/Focus button displays PTZ control options in the lower right corner of the currently selected video pane. You can press the control buttons on the front panel of the DX4000 to adjust the PTZ or focus settings for the camera.



**Figure 10.** Adjusting PTZ Options on the Monitor

You can also use the remote control to change which information is displayed on the DX4000. Refer to *Operating the DX4000 from the Remote Control* on page 13 for a description of each button on the remote control. You can also use the remote agent application to control the DX4000 display from a computer. Refer to *Working with the Remote Agent Application* on page 50 for additional information.

## ADJUSTING MENU SETTINGS



Figure 11. Main Menu

To access menus on the DX4000 press the Menu button on the front panel of the unit or on the remote control, and then enter a user ID and password. Each menu contains settings related to a different function on the DX4000. The menus are described below.

### DISPLAY MENU



Figure 12. Display Menu

Use the Display menu to change the information that is displayed on the monitor as you view video.

- **Date/Time:** Turn this setting on to display the date and time on the video panes. The setting affects all video panes.
- **Title:** Turn this setting on to display the camera title if it exists. The setting affects all cameras connected to the DX4000. To set up a title, use the Camera menu.
- **Status:** Turn this setting on to display the recording status of the video. A red box means that video is recording. A green box means that video buffered before an event-based recording is being recorded.
- **Border Color:** Select the border color for each video panel. Choices are White, Blue, Red, Yellow, Green, and Gray.
- **Sequence Dwell:** Select the interval that each video will be displayed before the DX4000 switches to the next video in a rotation. This setting is used when you display video in a full screen and rotate between all attached cameras. Sequence dwell time can be between 1 and 60 seconds.
- **Spot-Out Dwell:** Select the interval that video will be routed to the spot monitor from the camera. Spot-out dwell time can be between 1 and 60 seconds.
- **Deinterlace Mode:** Turn this setting on to remove the screen spread if you are recording at a high resolution (704 x 480) and a low frame rate.

## RECORD MENU



**Figure 13.** Record Menu

Use the Record menu to select the size and quality of recordings, to set up recording schedules, and to set up alarm-based recording.

- **Size/Record Rate/Quality:** Select the size or resolution at which video is recorded, the recording rate (frames per second), and image quality for recording video on each camera that is attached to the DX4000. Table B lists the available values for each setting.
- **Timer Recording Setup:** Use this option to set up a recording schedule and to set up motion detection. Refer to *Setting Up a Recording Schedule* on page 37 for additional information.
- **Alarm Recording Setup:** Use this option to set up recording based on alarms. Refer to *Setting Up Alarm-Based Recording* on page 41 for additional information.

**Table B.** Settings for Recording Video

<b>Size (resolution)</b>	<p>NTSC cameras: 352 x 240, 704 x 240, 704 x 480</p> <p>PAL cameras: 352 x 288, 704 x 288, 704 x 576</p> <p>Image size and recording rates are related. If you select a resolution that changes the recording rate, a message appears on the menu. You select a different size or recording rate if this happens.</p>
<b>Recording Rates</b>	<p>NTSC cameras: 30, 15, 10, 7, 3, 2, 1</p> <p>PAL cameras: 25, 12, 6, 3, 2, 1</p> <p>Rates vary between NTSC and PAL cameras. Each camera can record up to a maximum of 30 frames per second on NTSC cameras, and 25 frames per second on PAL cameras. Higher resolution images record at lower frame rates. Lower resolution images record at higher frame rates. The DX4000 records a maximum number of frames per second across all cameras: 120 fps for NTSC cameras, and 100 fps for PAL cameras.</p>
<b>Quality</b>	<p>Low</p> <p>Standard</p> <p>High</p> <p>Highest</p> <p>Choose a quality setting that suits your viewing requirements when playing back recorded video.</p>

## CAMERA MENU



Figure 14. Camera Menu

Use the Camera menu to adjust settings on cameras attached to the DX4000.

- **Status/Title Setup:** Use this option to review the status information and to set up the title for each camera. Titles will appear on the video panes if you enable this option on the Display menu.
- **Covert/PTZ Setup:** Use this option to set the covert operation for cameras and to select the PTZ protocol used by each camera. If a camera is set to covert operation, the DX4000 records video from it but does not display it. The DX4000 supports several PTZ protocols. Follow the camera manufacturer's recommendations when choosing the PTZ protocol for your cameras.
- **Color Setup:** Use this option to configure the brightness, contrast, color, and tint for each camera. The default value for each setting is 50. You can adjust these settings between 1 and 100.

## AUDIO MENU



Figure 15. Audio Menu

Use the Audio menu to set up the audio recording for video. These settings will take effect if a camera attached to the DX4000 also supports audio.

- **Audio Recording Setup:** Turn this setting on or off for each camera. You must also select the audio channel that is associated with each camera. The Audio Out connections are located on the back panel of the DX4000.
- **Live Audio Setup:** Turn this setting on to listen to audio while live video is being displayed. You must select the monitoring channel (1 through 4) and the network audio capabilities. One-way audio indicates that the DX4000 can send audio signals to the remote agent on a computer, but it cannot receive audio signals from the remote agent. With two-way audio the remote agent can send audio to a speaker that is connected through the DX4000.

## ALARM MENU



Figure 16. Alarm Menu

Use the Alarm menu to set up alarms and relays for cameras.

- **Alarm Input Setup:** Use this option to connect or disconnect alarms for any camera at any time. If you connect an alarm, you must associate it with a camera and select the alarm type - normally closed (N/C) or normally open (N/O).
- **Relay Output Setup:** Use this option to set up a relay in response to alarms. For each alarm, you can enable or disable the relay, select whether the relay mode is latched or transparent, and set the delay time.

A latched relay continues operating for the duration set for it even if an alarm is received but the alarm sensor stops working. A transparent relay stops working if the alarm sensor stops working after it receives an alarm.

Duration refers to either the delay between the occurrence of an alarm and the time at which a relay starts or the length of time that the relay remains in effect after the alarm occurs. Duration times can be increased by 5- or 10-second increments for the first minute, and then by one- or two-minute increments for a maximum of five minutes. Duration may also be set to continue until an operator responds and turns off the alarm with a key (Until Key-In).

- **Relay Type:** Use this option to indicate whether a relay is normally open (N/O) or normally closed (N/C).

## SYSTEM MENU



Figure 17. System Menu

Use the System menu to change the system information on the DX4000.

- **Date/Time:** Use this option to enter the current date and time on the DX4000. It is recommended that you enter this information before you start recording video so that the correct date and time is associated with all video.
- **Network:** Use this option to set up the network connection information for the DX4000. Network settings are used when someone accesses the DX4000 from a computer on which the remote agent is installed.
- **Buzzer Setup:** Use this option to enable or disable a warning sound when any of the following occur: alarm inputs, video loss, a hard disk is full, a disk error occurs, or the DX4000 detects input from the control buttons on its front panel.
- **Password:** Use this option to change passwords for any of the predefined users. The default password for each user is 1234. Passwords may be four characters long and may contain the numbers 1 through 4.

If you are concerned that a four-character password provides insufficient security on your network, it is recommended that you set up a firewall or other network security measures on your system.

- **Disk Write Mode:** Use this option to select whether to overwrite the data on the hard disk. When the hard disk is full, the oldest data is overwritten first if the disk write mode is set to On. If the overwrite mode is set to Off, the DX4000 will stop recording video as soon as the hard disk is completely full. To delete all recorded video immediately, use the Disk Initialize command on this menu.
- **System Information:** Use this option to review current system information. This option lists the current firmware and hardware versions, the video signal type (NTSC or PAL), disk size, the number of hard disk drives (one or two), the IP address, and the MAC address. If your unit contains two hard disk drives, both sizes are listed in the disk size field.

**WARNING:** Changing the video signal type reformats the hard disk. Reformatting a hard disk erases all recorded video. Consider backing up recorded video before you reformat a hard disk.

- **Factory Default:** Use this option to reset the DX4000 to its original settings. All settings, including network settings, recording schedules, alarm settings, and so forth, will be returned to their original settings. It is recommended that you stop recording video before you return the DX4000 to its factory default settings. Anyone using the remote agent application on a computer will no longer be able to connect to the DX4000 if the network settings are changed. The remote agent must be reconfigured before anyone can connect to the DX4000 again.

## CHANGING PASSWORDS

The DX4000 provides predefined users accounts for an administrator, manager, and operator. These predefined users all have the same password: 1234. For added security, you should change these passwords.

If you are concerned that a four-character password provides insufficient security on your network, consider setting up a firewall or other network security measures on your system. This will provide added security for users with access to the DX4000 from the remote agent application.

1. Press the Menu button on the front panel of the DX4000 or on the remote control.
2. From the main menu, navigate to the System menu, and then select Password. The Password menu appears.



Figure 18. Password Menu

3. Select a user, and then press the Enter button. Choices are Administrator, Manager, or Operator. The following screen appears.



Figure 19. Changing Passwords

4. Enter a password as follows:
  - a. Press the Enter button to select the Current Password field.
  - b. Use the channel selection buttons to enter the current password. Passwords must be four characters long and may contain the numbers 1 through 4.
  - c. After you enter a four-character password, the next field is selected automatically.
  - d. Enter the new password in the New Password field.
  - e. Re-enter the password again. The Save & Exit command is highlighted.
  - f. Press the Enter button to accept the change.
5. To clear the menus from the screen, press the Return button until all menus are cleared. Note that the "Saving Setup" message appears on the screen.

## RESETTING PASSWORDS

Passwords for user accounts can be reset to the factory default.

 **WARNING:** This procedure resets all passwords. If you have set up user IDs to log on to the DX4000 from the remote client application, you must edit the password settings on the remote client application before users can log on to the DX4000 again.

You must turn off the DX4000 to reset passwords. Any video recordings that are in progress will be stopped. If you cannot interrupt the recording, wait until a later time to reset the passwords.

### To reset the passwords

1. Exit the DX4000 if it is running, and then disconnect the power cable from the back of the unit.
2. While you reconnect the power cable, press and hold the Channel 2, Enter, and Fast Reverse buttons simultaneously.
3. Release the buttons after the Login screen appears. The passwords are reset automatically to their factory defaults. When the Login screen appears, you can log on to the DX4000 with the default password (1234).

## FACTORY DEFAULT SETTINGS

You can restore the DX4000 to its original factory settings. Restoring the unit to its original factory settings resets all settings. It does not erase any recorded video from the hard disk drive, nor does it reformat the drive.

1. Press the Menu button on the front panel of the DX4000 or on the remote control.
2. From the main menu, navigate to the System menu, and then select Factory Default. The Factory Default menu appears.



Figure 20. Factory Default Menu

3. Press the Enter button and a warning message appears on the screen. You can select OK and then press the Enter button to reset the unit to its original factory settings. If you do not want to restore the settings, select Cancel, and then press the Enter button to keep the current settings.



Figure 21. Factory Default Reset Warning Message

# Changing the Screen Layout

## SCREEN ROTATION MODE

To change the screen rotation mode, press the SCR Mode button on the front panel of the DX4000 or on the remote control until the mode you prefer is in use. By default, the DX4000 displays four video panes at one time. This is referred to as quad mode. The following display modes are available on the DX4000:

- **Quad mode:** Displays a maximum of four video channels at the same time.
- **Single mode:** Displays a single video channel at a time. The same video channel is displayed until you select a different one.
- **Sequence mode:** Rotates between a maximum of four video channels and displays them in single mode. A circular arrow appears in the upper center of the screen. The camera title changes as the DX4000 switches to another channel.



Figure 22. Sequence Mode on the DX4000

## SCREEN VIEW SELECTION

The DX4000 is set up to display a maximum of four video panes on a monitor. By default, all four channels are displayed in quad mode when you start the DX4000 for the first time. To change the screen view to display only one channel at a time, press any of the four channel buttons (1 through 4) on the front panel of the unit or on the remote control. This will display the video for the selected camera. Each time you press a numbered channel button, video from the corresponding camera is displayed on a full screen. To redisplay video from all four cameras at the same time, press the SCR Mode button until the screen is displaying all four channels.



Figure 23. Changing Screen Views

# Controlling Cameras from the DX4000

The instructions in this section describe how to control cameras with the buttons on the front panel of the DX4000. You can also control cameras by using the remote control. Refer to *Operating the DX4000 from the Remote Control* on page 13 for a description of the buttons on the remote control.

## PAN, TILT, AND ZOOM CONTROLS

1. Press the PTZ/Focus button on the front panel of the DX4000 or on the remote control. PTZ controls appear in the lower right corner of the video pane, and the screen mode changes to single mode.



Figure 24. PTZ Control Buttons

2. If the wrong channel is displayed, press the numbered channel button of the camera that you want to control.
3. Press the arrow buttons to control the camera.
4. Press the Return button when you are finished.

## ADJUSTING THE FOCUS OR IRIS ON A CAMERA

1. Press the PTZ/Focus button on the front panel of the DX4000 or on the remote control twice. Focus/Iris controls appear in the lower right corner of the video pane, and the screen mode changes to single mode.



Figure 25. Focus/Iris Controls

2. If the wrong channel is displayed, press the numbered channel button of the camera that you want to control.
3. Press the arrow buttons to adjust the focus or iris.
4. Press the Return button when you are finished.

## WORKING WITH PRESETS

With the DX4000, you can create and run presets. A preset is a command that performs some operation or opens a menu on a camera. Presets provide quick access to camera actions that would otherwise require many keystrokes. If your camera supports presets, you can set up and run a new preset. If you have Esprit or Spectra cameras, you can run any predefined presets. For a complete list of reserved presets, refer to your camera documentation. Instructions for creating and running. The steps for running some predefined presets differ slightly from running other presets. Refer to *To run a predefined preset* for more information. Preset 95, which displays the camera menu for Esprit and Spectra cameras, also requires special instructions to run. Refer to *Using Preset 95* on page 29 to run preset 95.



Figure 26. Preset Commands

### To create a preset

**NOTE:** If you try to create a preset with a number that is already in use on Esprit and Spectra cameras, the DX4000 will not save your changes.

1. Select a camera channel, and then use the PTZ/Focus controls on the DX4000 to reposition the camera on a new location.
2. Press the PTZ/Focus button on the front panel of the DX4000 or on the remote control until the Preset commands appear in the lower-right corner of the screen.
3. Press the down arrow button until you have selected the preset number that you want to create.
4. Press the channel button numbered 1 (F1 on the remote control). Each time you run this preset number, the camera will adjust itself to the location you selected in step 1.
5. Press the Return button to clear the menus from the screen.

### To run a preset

1. Select a camera channel, and then press the PTZ/Focus button on the front panel of the DX4000 or on the remote control until the Preset commands appear in the lower-right corner of the screen.
2. Press the up or down arrow button until you have selected the preset number that you want to run.
3. Press the channel button numbered 2 (F2 on the remote control) to start the preset.
4. Press the Return button to clear the menus from the screen.

### To run a predefined preset

Most presets invoke a PTZ command or display a menu. However, some presets on the Esprit and Spectra cameras, must be set before they can take effect. This is so for presets 90 and 91, which set the outer limits for manual stops, and for 92 and 93, which set the outer limits for scan stops. Before these presets can be run, you must select the outer limits for each camera.

1. Select a camera channel, and then press the PTZ/Focus button on the front panel of the DX4000 or on the remote control to reposition the camera to the outer-most limit that you want to scan or pan the camera.
2. Press the PTZ/Focus button on the front panel of the DX4000 or on the remote control until the Preset commands appear in the lower right corner of the screen.

3. Press the down arrow button until the one of the follow preset numbers appears:
  - 90 and 91: Set the outer limit for manual stops. Make sure to select different locations for each preset number.
  - 92 and 93: Set the other outer limit for scan stops. Make sure you select different locations for each preset number.
4. Press the channel button numbered 1 (F1 on the remote control).

## Using Preset 95

Preset 95 displays the camera menu for Esprit and Spectra cameras. You can use this menu to configure settings on these cameras. Follow these instructions to use Preset 95 and to navigate the camera menus.

1. Select a channel that is displaying Esprit and Spectra camera, and then press the PTZ/Focus button on the front panel of the DX4000 or on the remote control until the PTZ/Focus controls appear in the lower-right corner of the screen.
2. Press the up or down arrow button until you have selected preset 95.
3. Press the channel button numbered 1 (F1 on the remote control). The camera menu appears on the screen.
4. Navigate through the menu as follows:
  - Press the PTZ/Focus button on the front panel of the DX4000 until the PTZ controls are displayed, and then press the up or down arrow buttons to navigate the list of options.
  - Press the PTZ/Focus button on the front panel of the DX4000 until the Focus/Iris controls are displayed, and then press the left arrow button to select an option, or press the right arrow button to deselect an option.
5. Press the Return button until all menus or commands have been cleared from the monitor.

## WORKING WITH PATTERNS

Esprit and Spectra cameras support commands called patterns. A pattern is a series of camera actions that are strung together into a single command instead of performing many actions manually.



**Figure 27.** Pattern Commands

### To set up a pattern

1. Select a camera channel, and then press the PTZ/Focus button until the Pattern commands appear in the lower right corner of the screen. The screen mode changes to single-screen mode.
2. Use the up or down arrow to select a number that you want to assign to the pattern.
3. Press the channel button numbered 1 (F1 on the remote control) to start recording the pattern.
4. Press the PTZ/Focus button again to display the PTZ commands in the lower right corner of the screen.
5. Use the arrow keys on the keyboard or remote control to program the pattern as follows:
  - Use the right and left arrows to pan to the right or left.
  - Use the up or down arrows to tilt the camera up or down.
  - Use the fast-forward or fast-reverse buttons to zoom in or out.

6. When the pattern is programmed, press the PTZ/Focus button until the Pattern menu appears on the screen.
7. Press the channel button numbered 2 (F2 on the remote control) to stop recording the pattern.
8. Press the Return button when you are done.

### To run a pattern

1. Select a camera channel, and then press the PTZ/Focus button until the Pattern commands appear in the lower right corner of the screen. The screen mode changes to single-screen mode.
2. Use the up or down arrow to select the pattern number that you want to run.
3. Press the Enter button to start the pattern.
4. Press the Return button when you are done.

## MODIFYING CAMERA SETTINGS

With the DX4000, you can adjust many camera settings. Some settings are designed to maximize storage capacity and others affect overall picture quality while viewing live video. Some settings cannot be modified because they are updated automatically by the system. A camera's status is an example of a setting that is updated automatically.



Figure 28. Camera Menu

### To modify camera settings

1. Select Camera from the main menu of the DX4000, and then press the Enter button. The Camera menu appears.


**NOTE:** You can exit from the Camera menu at any time during the setup process. To exit completely, press the Return button until all menus are cleared from the screen. A message appears stating the changes are being saved.

2. Select Status/Title Setup, and then press the Enter button.
3. Select the Title field for any camera, and change it as follows:
  - a. Press the up or down arrow buttons to move to a camera title, and then press the Enter button to select it.
  - b. Press the up or down arrow buttons to change a character in the title. Valid characters are A through Z and 0 through 9. Titles can contain a maximum of seven characters.
  - c. Press the right arrow button to move to the next character in a title.
  - d. Press the Enter button to accept the changes to a selected title.
  - e. Repeat steps a through d for other titles.
  - f. Press the Return button after you have modified all of the titles that require changes.



**Figure 29.** Status/Title Setup Menu

4. Select Covert/PTZ Setup from the Camera menu, and then press the Enter button. The Covert/PTZ Setup menu appears.

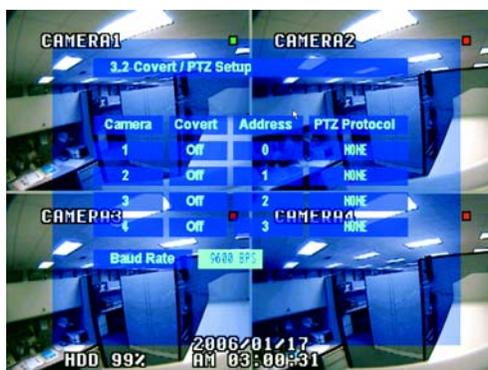

**Figure 30.** Covert/PTZ Setup Menu

5. For each camera, set up the following settings:
  - **Covert:** Turn this setting on or off. If a camera is set as covert, the DX4000 records its video but does not display it.
  - **Address:** Select the PTZ address in use by each camera. Valid addresses are 0 through 255. Refer to the operation manual for your camera to determine its PTZ address.
  - **PTZ Protocol:** Select the PTZ protocol in use by each camera. Several protocols are available. Refer to the operation manual for your camera to determine its PTZ protocol (for example, Pelco D or Pelco P).
6. Move to the Baud Rate field and select the rate at which PTZ cameras will communicate with the DX4000. The default rate is 9600 BPS. Available baud rates range from 2400 BPS to 34800 BPS.
7. Press the Return button after you have completed setting up covert and PTZ settings.
8. Select Color Setup from the Camera menu, and then press the Enter button. The Color Setup menu appears.



Figure 31. Color Setup Menu

9. Modify the following settings for each camera.
  - **Brightness:** Choose a value between 0 and 100. Adjust the brightness controls so that black content displays as true black on the monitor.
  - **Contrast:** Choose a value between 0 and 100. Adjust the contrast control to distinguish between the brightest and darkest parts of the displayed image.
  - **Color:** Choose a value between 0 and 100.
  - **Tint:** Choose a value between 0 and 100.
10. Press the Return button until the menus are cleared from the screen. A message appears on the screen indicating that the settings are being saved.

## MODIFYING AUDIO SETTINGS

Many cameras can transmit audio signals along with video signals. The DX4000 can be set up to record the audio signal and to transmit audio signals to remote users across a network or over the Internet. Audio settings are located on the Audio menu.



Figure 32. Audio Menu

### To modify audio recording settings

1. Select Audio from the main menu of the DX4000, and then press the Enter button. The Audio menu appears.
2. Select Audio Recording Setup, and then press the Enter button. The Audio Recording Setup menu appears.



**Figure 33. Audio Recording Setup Menu**

3. For each camera, modify the following settings, and then press the Enter button.
  - Turn audio recording on or off.
  - Associate an audio channel with a camera.
4. After these settings are modified, press the Return button until all menus are cleared. A message appears stating that the settings are being saved.

### To modify live audio settings

1. If it is not already displayed, select Audio from the main menu of the DX4000, and then press the Enter button. The Audio menu appears.
2. Select Live Audio Setup, and then press the Enter button. The Live Audio Setup menu appears.



**Figure 34. Live Audio Setup Menu**


3. For each camera, modify the following settings, and then press the Enter button.
  - Turn live audio on or off.
  - Select a monitoring channel. Choices are 1 through 4.
  - Select the network audio type. Associate an audio channel with a camera. With one-way audio, the DX4000 can record audio signals along with the video. With two-way audio the remote agent can send audio to a speaker that is connected through the DX4000. You might use this feature to allow an operator at a remote computer to communicate with a person waiting at a locked door or a similar situation. Audio transmitted *from* the remote agent is not recorded.
4. After these settings are modified, press the Return button until all menus are cleared. A message appears stating that the settings are being saved.

## MODIFYING IMAGE RECORDING SETTINGS

Image recording settings affect many aspects of working with the DX4000. Higher resolution images provide more detail in recorded video, which improves their usefulness when monitoring events. These high-resolution images also consume more hard disk space, which affects how much video can be stored on the hard disk. Higher resolution images take longer to transmit to a remote agent over a network. When determining the best image recording settings, you should weigh your storage needs with your video monitoring needs.

### To modify image recording settings

1. From the main menu of the DX4000 select Record, and then press the Enter button. The Record menu appears.
2. Select Size/Rec Rate/Quality, and then press the Enter button. The Size/Rec Rate/Quality menu appears.

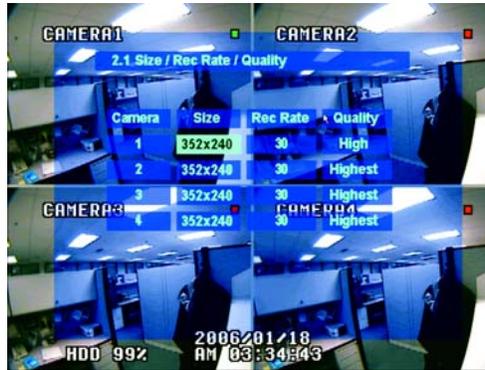

**Figure 35.** Size/Rec Rate/Quality Menu

3. For each camera, modify the following settings, and then press the Enter button.
  - **Size:** Select the resolution at which you want to record video. If you select a resolution that is incompatible with the recording rate setting, an error message appears on the screen. To increase the resolution, you must choose a lower recording rate. Sizes vary for NTSC and PAL cameras. Refer to Table C.
  - **Recording Rate:** Select a recording rate for the video. Recording rate is measured in frames per second (fps). The maximum frames per second is 30 frames. The recording rate and image size must be compatible. If you choose 30 fps, you must select a smaller image size. The total frames per second for all cameras varies for NTSC and PAL cameras. Refer to Table C, below.
  - **Quality:** Select a quality setting that is compatible with your requirements for playing back video. Available options are Highest, High, Standard, and Low.

**Table C.** Image Sizes and Maximum Recording Rates

Camera Type	Image Sizes	Recording Rates (fps)
NTSC	352 x 240	120 (for all four cameras)
	704 x 240	63 (for all four cameras)
	704 x 480	33 (for all four cameras)
PAL	352 x 288	100 (25 for all four cameras)
	704 x 288	53 (25 for all four cameras)
	704 x 576	28 (25 for all four cameras)

4. After these settings are modified, press the Return button until all menus are cleared. A message appears stating that the settings are being saved.

## MODIFYING ALARMS AND RELAYS



Figure 36. Alarm Menu

The DX4000 supports one alarm for each camera and one relay for all of the cameras. Alarms can be normally open or normally closed. When an event occurs that triggers these alarms, the DX4000 responds by recording video for the affected camera. For alarms that are normally open, an alarm is triggered when an event occurs that closes the alarm sensor. For alarms that are normally closed, an alarm is triggered when an event occurs that opens the alarm sensor.

The relay can be normally open or normally closed. Each alarm can be associated with the relay. If an alarm is triggered, the relay is also triggered. Relays can be latched or transparent. A latched relay operates for the duration that you set for it whether or not the alarm has stopped. A transparent relay runs until the triggered alarm is stopped.

### To modify alarm inputs

1. Select Alarm from the main menu, and then press the Enter button. The Alarm menu appears.
2. Select Alarm Input Setup, and then press the Enter button. The Alarm Input Setup menu appears.



Figure 37. Alarm Input Setup Menu

3. For each alarm, modify the following alarm settings:
  - Select an alarm, and change its status to Disconnected or Connected.
  - Associate each alarm with a specific camera.
  - Set the alarm type to normally open (N/O) or normally closed (N/C).
4. After these settings are modified, press the Return button until all menus are cleared. A message appears stating that the settings are being saved.

### To modify relay outputs

1. Select Alarm from the main menu, and then press the Enter button. The Alarm menu appears.
2. Select Relay Output Setup, and then press the Enter button. The Relay Output Setup menu appears.



**Figure 38.** Relay Output Setup Menu

3. For each alarm, modify the following relay settings:
  - Select an alarm, and change its relay output to Enable or Disable.
  - Change the relay mode to Latched or Transparent.
  - For latched relays, select a duration. Durations can last as little as five seconds, as long as five minutes, or until an operator manually turns off the relay with a key (Until Key-In).
4. Select the Relay Type field and set the relay to normally open (N/O) or normally closed (N/C).
5. After these settings are modified, press the Return button until all menus are cleared. A message appears stating that the settings are being saved.

# Creating Recording Schedules

By default, the DX4000 is set up for continuous recording. You can set up a schedule to record video only at certain times or to record video in response to motion or alarms.

**WARNING:** If you set up a recording schedule and also set up motion detection, the DX4000 will record video during the scheduled hours *only when motion is detected*.

## SETTING UP A RECORDING SCHEDULE

1. From the main menu on the DX4000, select the Record menu option. The Record menu appears.



Figure 39. Record Menu

2. Press the down arrow button to move to the Timer Recording Setup menu option, and then press the Enter button. The Timer Recording Setup menu appears.



Figure 40. Timer Recording Setup Menu

3. Press the up or down arrow buttons to select the Record field for a camera, and then press the Enter button to access the setting.
4. Press the up or down arrow buttons to turn the setting on or off, and then press the Enter button to accept the setting.
5. Move to the Mode field and select the recording schedule. Choices are Daily or Weekly.

6. If you choose Daily, you should select a start and stop time for the recording schedule. Choose the hour at which the recording should start and stop based on a 24-hour clock. For example, to start recording at 1:00 in the afternoon, choose 13.
7. If you choose Weekly, the following screen appears. The chart lists each day of the week and presents the hours in two lines for each day. The blocks are color coded. Yellow blocks indicate that video will be recorded. Dark blue indicates that video will not be recorded. Light blue indicates a block or range of blocks that is being changed.



**Figure 41.** Configuring a Weekly Recording Schedule

8. Press the up and down arrow buttons to move to a time that you no longer want to record video, and then press the Enter button. The block for that hour turns light blue.
9. Press the arrow buttons to move to the next hour you want to resume recording, and then press the Enter button again. The range of hours turns dark blue. You can select times horizontally or vertically along the chart. You can select only one row or column at a time.
10. Continue selecting times that you want to remove from the recording schedule each week. You can select several blocks of time throughout a weekday.
11. After you have configured the weekly recording schedule for a camera, press the Return button. The following dialog appears.



**Figure 42.** Saving a Weekly Recording Schedule

12. Select an option as follows, and then press the Enter button.
  - Select All: Selects the entire week to create a continuous recording schedule.
  - Deselect All: Turns off recording for the entire week.
  - Save & Exit: Saves the recording schedule as you have set it up.
  - Cancel: Removes all new selections and retains the current schedule.
13. Repeat these steps for each remaining camera.
14. Press the Return button until all menus are cleared. A message appears stating that the settings are being saved. The settings take effect immediately.

## SETTING UP MOTION DETECTION RECORDING

The DX4000 can record video based on motion detection so long as a recording schedule has been created. Before you set up motion detection recording, refer to *Setting Up a Recording Schedule* on page 37 for instructions on setting up a recording schedule.

1. From the main menu, select the Record option, and then select Timer Recording Setup. The Timer Recording Setup menu appears.



Figure 43. Timer Recording Setup Menu

2. Navigate to the Motion Detection Setup command, and then press the Enter button. The Motion Detection Setup menu appears.

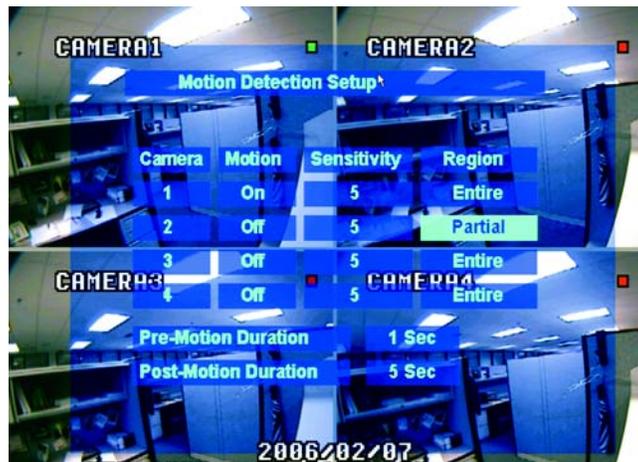


Figure 44. Motion Detection Setup Menu

3. For each camera, set up motion detection settings as follows:

- **Motion:** Turn it on or off.
- **Sensitivity:** Select a level between 1 and 10, where 10 is the most sensitive.
- **Region:** Select "Partial" or "Entire". When motion detection is turned on, the DX4000 detects motion on the entire screen by default.



**Figure 45.** Motion Detection Region Setup Screen

4. For partial regions, set up motion detection as follows:

- On the Motion Detection Region Setup screen (Figure 45), press the arrow buttons to begin selecting an area of the screen where motion detection will be turned *off*, and then press the Enter button.
- Press the arrow buttons to highlight an area on the screen in any direction from the starting point, and then press the Enter button.
- Select as many regions as you require.
- The DX4000 will detect motion in any areas of the screen that are yellow. Refer to Figure 46.



**Figure 46.** Selecting Regions for Motion Detection

5. After you have selected all the required regions, press the Return button. The following screen appears.



**Figure 47.** Saving Motion Detection Settings

6. Select an option as follows, and then press the Enter button.
  - **Select All:** Enables motion detection for the entire screen.
  - **Deselect All:** Disables motion detection for the entire screen.
  - **Save & Exit:** Saves the motion detection regions as you have set them up.
  - **Cancel:** Removes all new selections and retains the current motion detection regions.
7. Repeat these steps for each remaining camera.
8. Press the Return button until all menus are cleared. A message appears stating that the settings are being saved. The settings take effect immediately.

## SETTING UP ALARM-BASED RECORDING

Setting up alarm-based recording is similar to setting up a recording schedule. You must first turn on the recording for a particular camera, and then you must choose a start and stop time. For alarm-based recording to take effect, you must connect alarms to the DX4000 and associate them with the correct camera. Refer to installation manual for information about connecting alarms to the unit.

1. From the main menu on the DX4000, select the Record menu option. The Record menu appears.



**Figure 48.** Record Menu

2. Press the down arrow button to move to the Alarm Recording Setup menu option, and then press the Enter button. The Alarm Recording Setup menu appears.



**Figure 49.** Alarm Recording Setup Menu

3. For any camera that is set up with an alarm, select the Record field and turn on recording.
4. Select a start and stop time if you want to limit the recording to less than the full day.
5. Move to the pre-alarm duration field and select the number of seconds before an alarm that the DX4000 should start recording. Including pre-alarm activity in the recorded video ensures that you will capture all relevant activity surrounding an alarm. Choose between 1 and 5 seconds.
6. Move to the post-alarm duration field and select the number of seconds after an alarm that the DX4000 should continue recording. Including post-alarm activity in the recorded video ensures that you will capture all relevant activity surrounding an alarm. You can record for a maximum of three minutes.
7. Press the Return button twice to display the main menu. A message appears stating that the settings are being saved. The settings take effect immediately.

# Monitoring Live Video

---

With the DX4000 you can monitor up to four video channels simultaneously. There are three screen modes available: single mode, quad mode (four channels), and sequencing mode. Single mode displays video from a single camera. This same camera is displayed until you select another one or until you change the screen mode. Quad mode displays video for up to four cameras at the same time in a 2x2 grid. Sequencing mode displays video from a single camera and rotates among all connected cameras. With this screen mode, you can watch video from all connected cameras without having to select a different channel. The DX4000 cycles through the video on all connected cameras and displays it for a short time before displaying video from the next camera.

Along with choosing a screen mode, you can disconnect cameras, adjust the audio volume associated with a camera, and adjust the color settings for cameras.

## To change the screen mode

1. If necessary, press the Return button to clear all menus from your monitor.
2. Press the SCR Mode button on the front panel of the DX4000. Each time you press this button, the monitor display changes.
3. Continue pressing the SCR Mode button until the display mode is as you want it.
4. If you choose sequencing mode, a circular arrow appears in the top center of the monitor, and the camera name changes each time a new camera is displayed.



**Figure 50.** Single Mode and Sequencing Mode Video Displays

## To view a specific video channel in single mode

1. If necessary, press the Return button to clear all menus from your monitor.
2. Press one of the numbered channel buttons on the front panel of the DX4000. Video for the selected camera is displayed on the screen in single mode no matter what screen mode you were using.

# Working with Recorded Video

You can search for recorded video by recording date or event, play back recorded video, and back up video to a CD-RW drive, DVD-RW drive, or a USB flash memory device.

## SEARCHING FOR VIDEO

1. Press the Search button on the front panel of the DX4000, and then enter your password on the Search login screen.




**Figure 51.** Search Login Screen

2. On the Search menu, select the type of search you want to perform, and then press the Enter button. To search for video by date, proceed to step 3. To search for video by event, proceed to step 7.



**Figure 52.** Search Menu

3. If you choose to search by date and time, a calendar appears. Press the arrow buttons to select a date on the current month or to select a different month, and then press the Enter button after you select a date.

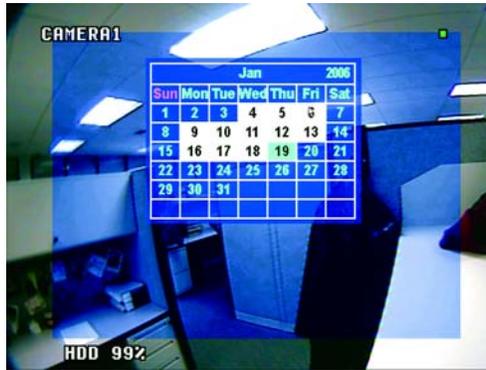

**Figure 53.** Searching by Date and Time

The screen expands to include a 24-hour timeline for the selected date. Hours for which there is recorded video are gray. Hours for which no video is recorded are blank.



**Figure 54.** Timeline Showing Available Recorded Video

4. Press the right or left arrow buttons on the front panel of the DX4000 to move to the time that you want to view. The cursor moves in 15-minute increments. When searching for video recorded during Daylight Saving Time, make a note of the following exceptions:
  - When the time is set back an hour, there will be two sets of video available for the 1:00 A.M. hour. You must select a time *before* 1:00 A.M. to search for both hours' worth of video.
  - When the time is set forward an hour, there will be no video recorded between 2:00 A.M. and 3:00 A.M.
5. Press the Enter button after you have selected a time. The video is displayed on the monitor in four-channel mode. Each video pane contains recorded video from a specific camera. A play button appears in the lower right video pane.



**Figure 55.** Results When Searching for Video by Date

6. Refer to *Playing Recorded Video* on page 47 for instructions on playing back video.

7. If you choose to search for video by event, an Event View menu appears (Figure 56). Select a start time and end time as follows:
  - Press the Enter button to select the field, or to accept any changes.
  - Press the up or down arrow buttons to change the highlighted segment of the date or time, or to move to the next field after you accept your changes.
  - Press the right or left arrow buttons to move to the next segment of the date or time.



**Figure 56.** Searching for Video by Event

8. Move to the event types, and press Enter to select or deselect each event type.
9. Move to the Start Search command, and then press the Enter button. Any recorded video that matches your search criteria appears in the list.



**Figure 57.** Results When Searching for Video by Event

10. Select a video recording, and then press the Enter button. The video appears on the monitor in single-screen mode.
11. Refer to *Playing Recorded Video*, below for instructions on playing back video.

## PLAYING RECORDED VIDEO

To play back recorded video, you must first follow the instructions above to search for video. When you search for video by date, the DX4000 displays all video on the screen. When you play it back, you will play back all of the video simultaneously. When you search for video by an event, the DX4000 lists each recording separately. When you play it back, you play back the video simultaneously in four-channel mode. Use the numbered channel buttons to view video from only one channel.



Figure 58. Video Control Buttons

1. Use the video control buttons on the front panel of the DX4000 to play back video as follows:
  - Press the Play button, or right arrow, to play the video at normal speed.
  - Press the Fast Forward button, or double right arrow, to play the video at speeds up to 64 times faster.
  - Press the Rewind button, or left arrow, to play the video backwards at normal speed.
  - Press the Fast Rewind button, or double left arrow, to play the video backwards at speeds up to 64 times faster.
  - Press the Pause button to stop the video.
2. After you have reviewed the video, press the Return button on the front panel of the DX4000 to resume viewing live video.

## BACKING UP VIDEO

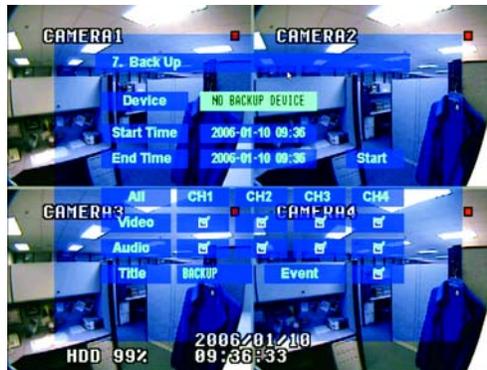


Figure 59. Back Up Menu

The Back Up menu is used to copy recorded video from the DX4000 to a backup device, usually to a writable CD (CD-RW) or DVD (DVD-RW). If your unit does not have a CD-RW or DVD-RW drive, you can back up video to a USB flash memory device so long as it has sufficient storage space for the recorded video clip. The following settings appear on the Back Up menu:

- **Device:** Select the device to which the video will be copied. If “No Backup Device” appears, your unit does not contain any writable media in either the CD-RW drive, DVD-RW drive, or USB port. You cannot back up recorded video if no device is available or if the disc already has data written on it. Always provide a blank disc, or reformat an existing disc before using it. You must reformat discs on a computer.
- **Start Time:** Select the start time for the video that you want to copy.
- **End Time:** Select the end time for the video that you want to copy.
- **All:** Select this option if you want to copy all recorded video to external storage devices. The storage device must have sufficient space to copy all of the video.
- **Video:** Select each channel if you want to copy only the video recorded from specific cameras.
- **Audio:** Select each channel if you want to copy only the audio recorded from specific cameras.
- **Title:** Enter a name for the backup copy of recorded video. The name can contain 11 characters and can contain these letters or symbols: A through Z, 0 through 9, or a space.
- **Event:** Select this option if you want to copy only event-based recordings.

## To back up video

The DX4000 supports backup to three different devices. All units support backups to a USB flash memory device. If you purchased a model that contains a CD-RW or DVD-RW drive, you also can back up video to a blank or reformatted disc. As a safety precaution, the DX4000 will not overwrite a disc that already contains data on it. You must reformat a disc on a computer if you intend to back up video to it from the DX4000. The Backup Player is exported automatically with the video.

1. Exit all menus if any are displayed.
2. Press the Search button on the front panel of the DX4000.
3. Type your password, and then press the Enter button. The Search menu appears.



Figure 60. Backing Up Video

4. Select Back Up, and then press the Enter button. The Back Up menu appears.



Figure 61. Back Up Menu

5. Select the storage device that you want to use, and then press the Enter button.
6. Select a start and end time if you want to limit the backup to specific days.
7. Select the video you want to back up to the device as follows:
  - Select All to back up all video for the time period.
  - Select specific channels to back up video for just those cameras.
  - Select the audio signal for each channel that you want to include in the backup.
  - Select Event if you want to back up video recorded based on events.
8. If desired, move to the Title field and modify the title for this video as follows:
  - Press the Enter button to select the field.
  - Press the up or down arrow buttons to change each character in the title.
  - Press the right or left arrow buttons to move to the next or previous character.
  - Press the Enter button when you are done.
9. Move to the Start command, and then press the Enter button to start the backup.

10. If there is no media in the drive a warning message appears. Insert media into the drive, and then press the Enter button.



**Figure 62.** Missing Media Warning Message

11. The Back Up menu displays a list of recorded video that matches your selection criteria along with estimates of how much storage space the video clips require. Review the list and decide whether or not to back up the video. Files that indicate a size of 0 MB will not be backed up.



**Figure 63.** List of Backup Video Files

12. Press the Enter button to start the backup, or press the Return button to cancel the backup.
13. A series of messages appears on the screen that tracks the progress of the backup. If you backed up the video to a disc, it is ejected after the backup is complete.



**Figure 64.** Backup Progress Messages

14. Press the Return button until all menus are cleared from the screen.

# Working with the Remote Agent Application

## ABOUT THE REMOTE AGENT

The remote agent application provides the same functions that are available directly from the DX4000. Use the remote agent if you are away from the unit but you still want to monitor live video, search for recorded video, or adjust system settings. The remote agent can connect to the DX4000 over your company network. Refer to *Configuring the Remote Agent* on page 52 for instructions on how to set up a remote connection with the DX4000. Refer to the installation manual for instructions on installing the remote agent application on your computer.

### NOTE:

- You might notice that the remote agent application responds slowly or displays video slowly if you view video while several other applications are open on your desktop. Consider closing other Windows applications while you use the remote agent to review video on the DX4000.
- If your computer system has a primary and secondary monitor, always position the remote agent in the primary monitor.

## OVERVIEW OF THE MAIN SCREEN



Figure 65. Remote Agent Main Screen

- 1 **Video display area:** Displays up to four camera channels simultaneously. The camera title, image resolution, and date and time appear in the margins of each video pane.
- 2 **Remote agent control buttons:** Operate the remote agent application with any of these buttons. Refer to *Remote Agent Control Buttons* on page 51 for a description of these buttons.
- 3 **Hard disk drive storage availability:** Displays the amount of disk space in use. This number is an estimate. For systems that are set to overwrite older video, this number remains at 99%.
- 4 **Audio control buttons:** Change the volume of audio or turn off volume for the selected camera channel.
- 5 **Channel selection numbers:** Select a camera channel to display video when viewing video in single-screen mode or sequencing mode, or select a camera to control PTZ or focus.

## REMOTE AGENT CONTROL BUTTONS

	<b>Search mode:</b> Displays a list of recorded video at the bottom of the screen and allows you to search for video. this button is available only while in Live Mode.		<b>Live mode:</b> Displays live video on the DX4000. This button is available only while in Search Mode.
	<b>Setup:</b> Displays the Setup screen from which you can configure the DX4000.		<b>Connect network:</b> Connects the remote agent application to the DX4000.
	<b>Single-Screen mode:</b> Changes the display to a single channel display.		<b>Disconnect network:</b> Disconnects the remote agent application from the DX4000.
	<b>Four-Channel mode:</b> Changes the display to a four channel display.		<b>Backup:</b> Backs up the currently selected video to the local hard disk or to a removable storage device.
	<b>Sequencing mode:</b> Changes the display to a sequencing rotation display.		<b>Save image:</b> Saves a single image to the local hard disk or to a removable storage device.
	<b>Extended view:</b> Expands the video to display across the entire monitor. Double-click the video display to return to the previous screen mode.		<b>Print image:</b> Captures the current image and prints it on a printer that you select.
	<b>Save AVI file:</b> Saves the currently displayed video as an AVI file on the local hard disk.		<b>Search log:</b> Displays a log of all video recorded by date and time.
	<b>Adjust color:</b> Displays the Adjust Color screen. Any adjustments to color affect all channels.		<b>Search events:</b> Displays a list of recorded events from which you can choose one to view.
	<b>Camera controls:</b> Control camera functions like pan, tilt, and zoom, and adjust the focus and iris settings with these buttons. These controls are available only in Live Mode.		<b>Play backup video:</b> Starts the DX4000 video player so that you can view recorded video. This stand-alone video player can be used any time to view video instead of using the remote agent application.
	<b>Minimize button:</b> Reduces the application to a button on the taskbar.		<b>Playback controls:</b> Start and stop the currently playing video. These controls are available only in Search Mode.
	<b>Exit buttons:</b> Close the application. These buttons are located at the top and bottom of the remote agent controls.		

## STARTING AND STOPPING THE REMOTE AGENT

### To start the remote agent

The DX4000 remote agent can be started in either of the following ways:

- From the Windows Start menu, locate and double-click the DX4000 remote agent shortcut.
- From Windows Explorer, browse for the installation directory and double-click the application icon. The default installation directory is C:\Program Files\Pelco\DX4000.

### To stop the remote agent

To stop the DX4000 remote agent, click either of the disconnect buttons   located along the right of the screen. To disconnect from the DX4000 without closing the remote agent application, click the Disconnect button .

## CONFIGURING THE REMOTE AGENT

Before you can view video recorded on the DX4000 from the remote agent, you must set up a network connection for the DX4000. You may also configure optional settings for the remote agent. These settings are described below.

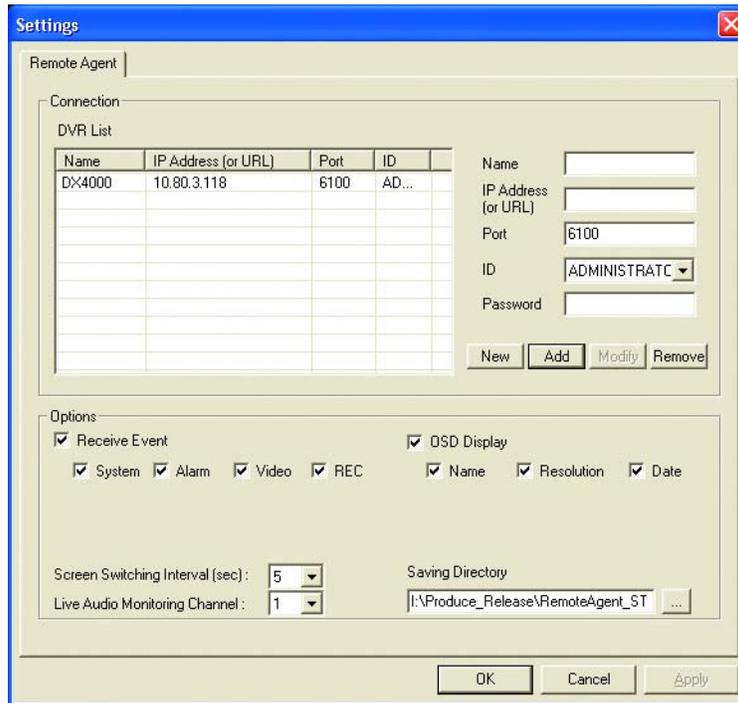


Figure 66. Remote Agent Settings Screen

### To create a network connection for the DX4000

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not already open. The Settings screen appears and the Remote Agent tab is displayed.
2. Under Connection, provide the following information in the fields along the right side of the tab:
  - **Name:** Provide a name for the DX4000. This name appears in a list of available connections on the main screen of the remote agent application.
  - **IP Address:** Provide the Internet IP address of the DX4000. If the DX4000 uses DHCP to derive its IP address, this field can be blank.
  - **Port:** Enter the port number for the DX4000. The default port number is 6100.
  - **ID:** Select a user profile that will be used to connect to the DX4000. Choices are Administrator, Manager, and Operator. Choose Administrator if you intend to modify settings on the DX4000. The Manager and Operator user profile cannot modify settings on the DX4000.
  - **Password:** Enter the password of the user profile that will be used to connect to the DX4000. The default password for each user is 1234.
3. Click either the New or Add button to accept the settings.
4. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

### To configure optional settings on the remote agent

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Change any of the following settings:
  - **Receive Event:** Check this box if you intend to search for recorded video based on events that are stored in a log file. By default all events are selected. Each time the DX4000 registers one of these events, an entry is stored in a log file on the DX4000 hard disk.
  - **OSD Display:** Check this box if you want to change the information that is displayed in each video pane. You can display the camera


name, current date, and image resolution.

- **Screen Switching Interval (Sec):** Select the number of seconds that each channel should be displayed before switching to the next channel. This setting is used when the Screen Mode is set to Sequencing.
- **Live Audio Monitoring Channel:** Select the audio channel that you will use to listen to audio associated with a camera.
- **Saving Directory:** Select the directory where you want to store video and snapshot files. By default this is the installation directory for the remote agent application. To change the directory, click the Browse button located to the right of the field.

3. Click the Apply button to save the changes and continue to other settings under the DVR System tab. If you are finished updating settings, click the OK button to close the screen.

## CONFIGURING THE DX4000 FROM THE REMOTE AGENT

Any DX4000 setting can be configured from the remote agent application. If the remote agent application is not connected to the DX4000, the DVR System tab will not be available on the Settings screen.

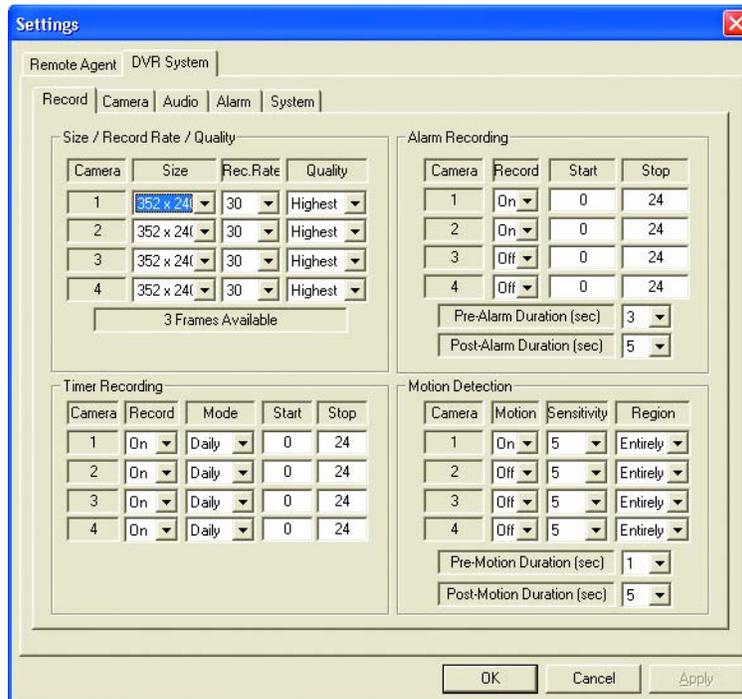

**Figure 67.** Configuring the DX4000 from the Remote Agent

## RECORDING SETTINGS

Use the Record tab to configure recording schedules for the DX4000 along with the size, recording rate, and quality of the video. You can record video based on the time and date, alarms, or motion detection. Settings vary for NTSC and PAL cameras. Refer to *Record Menu* on page 19 for more information about recording settings.

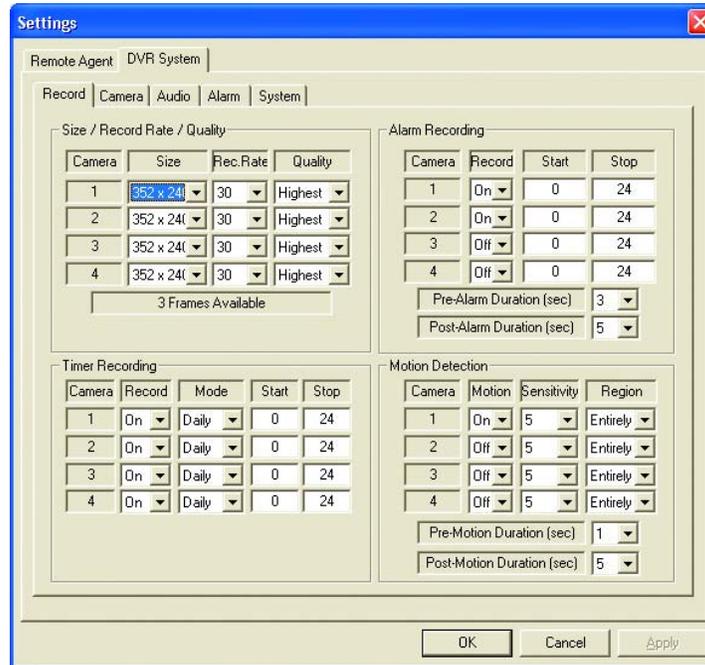


Figure 68. Configuring Recording Settings from the Remote Agent

### To set up recording quality

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Open the DVR System tab, and then click the Record tab.
3. Under the Size/Record Rate/Quality settings, configure the following information for each camera:
  - **Size:** Select an image size. Available sized vary for NTSC and PAL cameras.
  - **Record Rate:** Select the number of frames per second that you want to record. The DX4000 records at different rates for NTSC and PAL cameras.
  - **Quality:** Select the quality setting for video. The higher the setting you choose, the greater the resolution will be when playing back recorded video.
4. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

### To set up recording schedules

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Open the DVR System tab, and then click the Record tab.
3. Under the Timer Recording settings, configure the following information for each camera:
  - **Record:** Set this to On or Off.
  - **Mode:** Select the recording schedule. Choices are Daily and Weekly. If you select Weekly, the Timer Recording Setup screen (Figure 69) appears. The DX4000 records during the hours that are shaded. Blank hours are not recorded. Select hours by clicking in each square, or drag your mouse across a row or block of squares. Right-click to use the shortcut menu to select, deselect, or cancel your settings.

- **Start:** Select the hour at which recording should start. The schedule is based on a 24-hour clock. If you select 0, recording will start just after midnight. For example, select 23 to begin recording at 11:00 PM, or 2300 hrs.
  - **Stop:** Select the hour at which recording should stop. The schedule is based on a 24-hour clock. For example, select 23 to stop recording at 11:00 PM, or 2300 hrs.
4. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

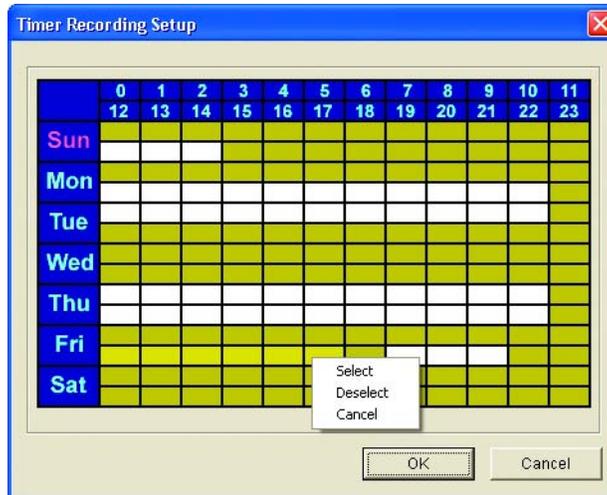


Figure 69. Timer Recording Setup Screen

### To set up alarm recording

**NOTE:** If you want to refine a schedule so that video is recorded based on motion detection, you must first set up timer recording for your cameras.


1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Open the DVR System tab, and then click the Record tab. (See Figure 68 on page 54.)
3. Under the Alarm Recording settings, configure the start and stop times for recording. Based on the start and stop times you select for each camera, the DX4000 will add an entry to the log each time an alarm occurs. You can search for these marked events.
  - **Record:** Turn on recording to enable a recording schedule for each camera.
  - **Start:** Select the hour at which you want to start recording each day. Time is selected based on a 24-hour day. If you select 0, recording will start just after 12:00 midnight.
  - **Stop:** Select the hour at which you want to stop recording each day. Time is selected based on a 24-hour day where 24 is 12:00 midnight.
4. Move to the pre-alarm duration field and select the number of seconds before an alarm that the DX4000 should start recording. Including pre-alarm activity in the recorded video ensures that you will capture all relevant activity surrounding an alarm. Choose between 1 and 5 seconds.
5. Move to the post-alarm duration field and select the number of seconds after an alarm that the DX4000 should continue recording. Including post-alarm activity in the recorded video ensures that you will capture all relevant activity surrounding an alarm. You can record for a maximum of three minutes.
6. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

### To set up motion detection

To record video based on motion detection, you must first set up timer recording. The DX4000 will use motion detection to record video during the scheduled recording start and stop times that you select for each affected camera.

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.

2. Open the DVR System tab, and then click the Record tab. (See Figure 68 on page 54.)
3. Turn on timer recording for each camera for which you will set up motion detection. The Motion Detection settings are enabled for each camera as you set up timer recording for them.
4. Under the Motion Detection settings, configure the following settings.
  - **Motion:** Turn it on or off.
  - **Sensitivity:** Select a sensitivity level between 1 and 10 where 10 is the most sensitive.
  - **Region:** Select "Partial" or "Entire". When motion detection is turned on, the DX4000 detects motion on the entire screen by default. If you select "partial," the Motion Area Setup screen appears (Figure 70).
5. For partial regions, set up motion detection as follows:
  - a. On the Motion Area Setup screen, press and hold the mouse button while you highlight a region. The DX4000 will detect motion in any areas of the screen that are yellow.
  - b. A shortcut menu appears when you release the mouse button.
  - c. Choose an option that applies to the selected region: "Select" includes the region in your motion detection areas, "Deselect" removes the region from your motion detection areas, and "Cancel" exits the shortcut menu and returns you to the Motion Area Setup screen without altering the settings for the region.
  - d. After you are satisfied with the motion settings for a camera, click the OK button to return to the Record tab.
  - e. Repeat steps a through d for each remaining camera.

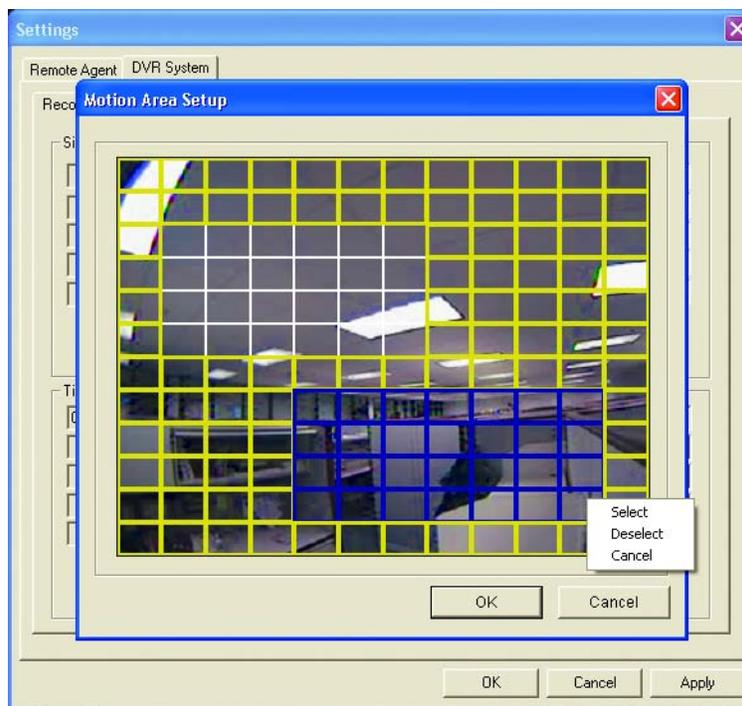

**Figure 70.** Selecting Partial Regions for Motion Detection

6. Move to the pre-motion duration field and select the number of seconds before the motion is detected that the DX4000 should start recording. Including pre-motion activity in the recorded video ensures that you will capture all relevant activity surrounding the event. Choose between 1 and 5 seconds.
7. Move to the post-motion duration field and select the number of seconds after the motion is detected that the DX4000 should continue recording. Including post-motion activity in the recorded video ensures that you will capture all relevant activity surrounding the event. You can record for a maximum of three minutes.
8. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

## CAMERA SETTINGS

Use the Camera tab to configure general information for each camera. You can create a title, adjust the color quality, turn on covert recording, and enable and configure PTZ controls for each camera. You can also set the baud rate that the DX4000 uses for all cameras.

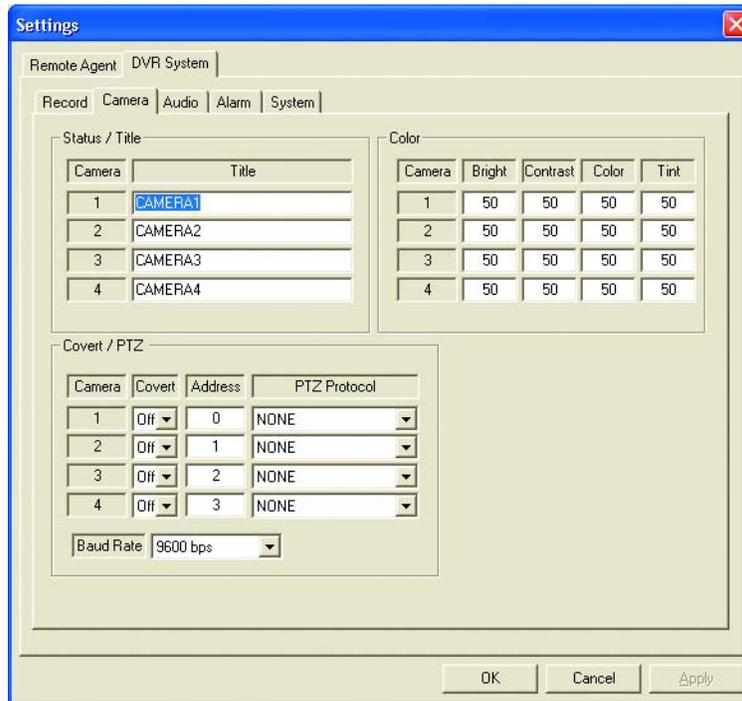


Figure 71. Configuring Camera Settings from the Remote Agent

### To configure cameras

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Open the DVR System tab, and then click the Camera tab.
3. Enter a title for each camera. This title appears on the screen if you have enabled it on the display settings.
4. Under the Color settings, select the brightness, contrast, color, and tint settings for each camera.
  - **Brightness:** Adjust this setting to display black picture content as true black on your monitor.
  - **Contrast:** Adjust this setting to distinguish between the darkest and lightest picture content on your monitor.
  - **Color:** Adjust this setting to increase or decrease quality of the color picture content that is displayed on your monitor.
  - **Tint:** Adjust this setting to increase or decrease the saturation of color for picture content that is displayed on your monitor.
5. Under the Covert/PTZ settings, configure the following information for each camera:
  - **Covert:** Set this to On or Off. If you turn on covert recording, the DX4000 will record video from the camera, but it will not display live video from the camera.
  - **Address:** Enter the PTZ address for the camera. This number must match the pin number that was selected on the camera. Change this number to match the number in use by the camera.
  - **PTZ Protocol:** Select the protocol. The DX4000 supports a wide range of PTZ protocols. Refer to the manufacturer's documentation provided with your camera to select the correct protocol.
6. Select the baud rate for the RS495 port. Choices range from 2400 Kbps to 19200 Kbps.
7. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

## AUDIO SETTINGS

Use the Audio tab to configure audio channels that are connected to cameras. A separate audio channel is available to record audio for each camera. A single channel is available to monitor audio while you are watching live video.

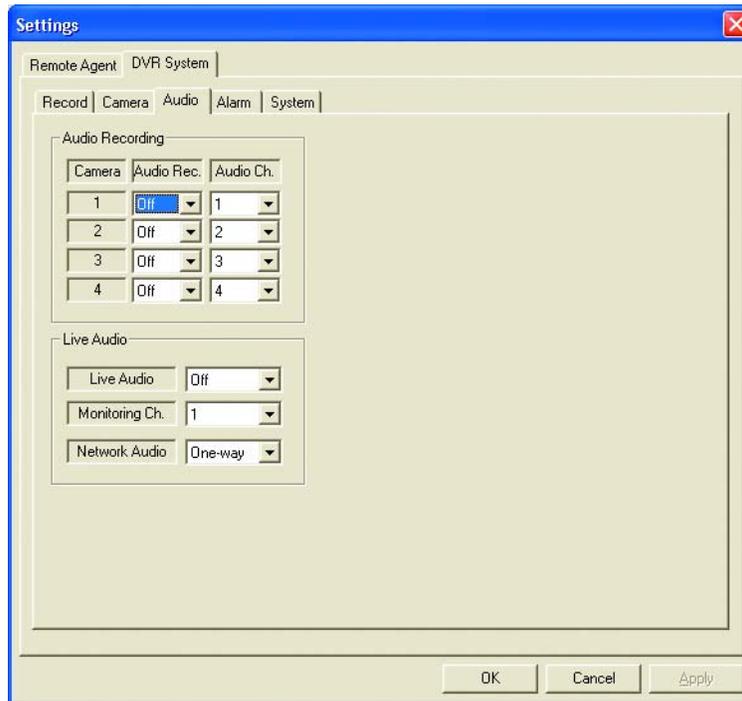


Figure 72. Configuring Audio Settings from the Remote Agent

### To set up audio recording

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Open the DVR System tab, and then click the Audio tab.
3. For each camera, configure the following settings:
  - **Audio Recording:** Set this to On or Off. When set to On, the DX4000 will record audio each time an alarm occurs.
  - **Audio Channel:** Select the audio channel that is connected to the camera. Refer to the back panel of the unit to verify the channel number.
4. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

### To set up live audio

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Open the DVR System tab, and then click the Audio tab.
3. Under Live Audio, configure the following settings:
  - **Live Audio:** Set this to On or Off. When set to On, the remote agent can receive live audio from cameras through the DX4000.
  - **Monitoring Channel:** Select the audio channel that is connected to the camera. Refer to the back panel of the unit to verify the channel number.
  - **Audio Network:** Select the type of audio the remote agent can receive. With one-way audio you can listen to the audio stream associated with a camera. With two-way audio the remote agent can send audio to a speaker that is connected through the DX4000. You might use this feature to allow an operator at a remote computer to communicate with a person waiting at a locked door or a similar situation. Audio transmitted *from* the remote agent is not recorded.

- Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

## ALARM SETTINGS

Use the Alarm tab to set up alarms for the DX4000. A separate alarm input is available for each camera. Alarms can be normally open or normally closed. A single relay output is available for all of the cameras. This relay can be normally open or normally closed.

The screenshot shows the 'Settings' dialog box with the 'Remote Agent' tab selected and the 'DVR System' sub-tab active. The 'Alarm' tab is selected. The 'Alarm Input' section contains a table with the following data:

Camera	Status	Camera	Type
1	Disconnected	1	N/Open
2	Disconnected	2	N/Open
3	Disconnected	3	N/Open
4	Disconnected	4	N/Open

The 'Relay Output' section contains a table with the following data:

Camera	Relay Out	Mode	Duration
1	On	Transparent	5 sec
2	On	Latched	2 min
3	Off	Latched	5 sec
4	Off	Latched	5 sec

Below the Relay Output table, the 'Relay Type' is set to 'N/Open'. At the bottom of the dialog are 'OK', 'Cancel', and 'Apply' buttons.

Figure 73. Configuring Alarm Settings from the Remote Agent

### To set up alarm inputs and relay outputs

- From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
- Open the DVR System tab, and then click the Alarm tab.
- Under Alarm Input, configure the following settings for each camera:
  - Status:** Set this to Connected or Disconnected.
  - Camera Input:** Select the alarm input channel that is associated with the camera. Choices are 1 through 4.
  - Type:** Select the type of alarm. Choices are Normally Open and Normally Closed.
- Under Relay Output, configure the following settings for each camera:
  - Relay Out:** Set this to On or Off. When the relay is turned on, it will respond to an alarm at the associated camera.
  - Mode:** Set the relay mode to Transparent or Latched. A transparent relay stops working if the alarm sensor stops working after it receives an alarm. A latched relay continues operating for the duration set for it even if alarm is received but the alarm sensor stops working.
  - Duration:** Select the length of time after an alarm is received that the relay will continue to operate. Duration refers to either the delay between the occurrence of an alarm and the time at which a relay starts or the length of time that the relay remains in effect after the alarm occurs. Duration times can set for 5- or 10-second increments for the first minute, and then in one- or two-minute increments for a maximum of five minutes. Duration may also be set to continue until an operator responds by turning off the alarm with a key (Until Key-In).
- Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

## SYSTEM SETTINGS

Use the System tab to configure general system information for the DX4000. Some information can be reviewed on this tab but not changed. Buzzer sound settings, passwords, disk write mode, and network connection and speed can be configured on the tab.

**TIP:** Refer to the System tab when you need to locate the software version number. The information on this tab is useful when troubleshooting the system or upgrading to a newer version.

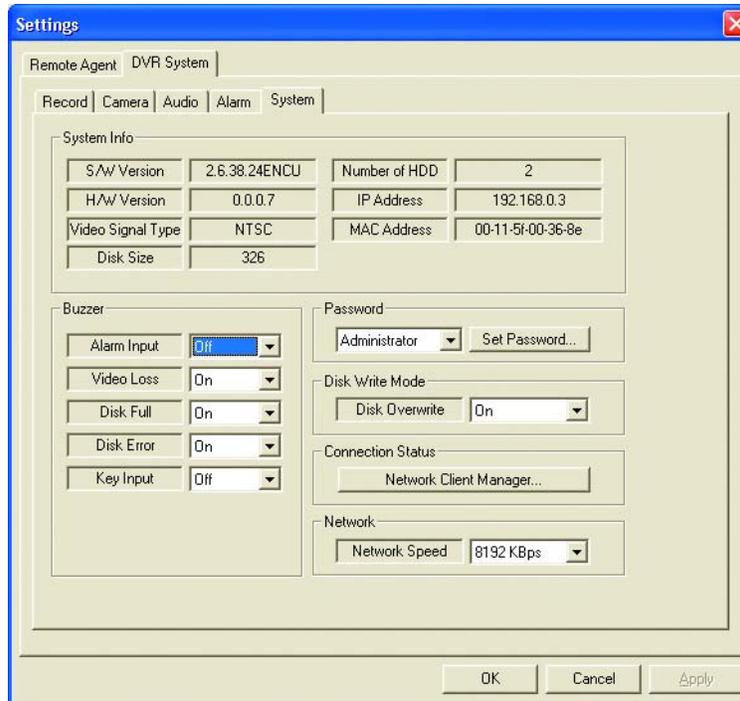


Figure 74. Configuring System Settings from the Remote Agent

### To review system information

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Open the DVR System tab, and then click the System tab.
3. Review the following general system information:
  - **S/W Version:** This is the version number of the firmware installed on the DX4000.
  - **H/W Version:** This is the version number of the motherboard installed on the DX4000.
  - **Video Signal Type:** This is the type of video signal that you are recording from the cameras. Video signal types can be NTSC or PAL.
  - **Disk Size:** This is the size of the hard disk drive. If two hard disk drives are installed on the DX4000, this number is the size of the primary hard disk drive.
  - **Number of HDD:** This is the number of hard disk drives installed on the DX4000. A maximum of two hard disk drives may be installed on the unit.
  - **IP Address:** This is the IP address of the DX4000. Use this address when connecting to the DX4000 from the remote agent application or the web client.
  - **MAC Address:** This is the MAC address of the DX4000. Use this address to connect to the DX4000 from the remote agent application if your network uses a DDNS to derive IP addresses.
4. Click the OK button to close the screen.

### To configure buzzer sounds

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.

2. Open the DVR System tab, and then click the System tab.
3. Under Buzzer, configure the following settings:
  - **Alarm Input:** Set this to On if you want to hear a buzzer sound any time an alarm occurs.
  - **Video Loss:** Set this to On if you want to hear a buzzer sound any time the DX4000 detects that the video signal is lost while recording.
  - **Disk Full:** Set this to On if you want to hear a buzzer sound when the hard disk drive is almost full.
  - **Disk Error:** Set this to On if you want to hear a buzzer sound any time the DX4000 detects an error on a hard disk drive.
  - **Key Input:** Set this to On if you want to hear a buzzer sound any time a button is pressed on the front panel of the DX4000.
4. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

## To modify passwords

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Open the DVR System tab, and then click the System tab.
3. Under Password, select a user profile from the list, and then click the Set Password button. The Set Password screen appears.



**Figure 75. Set Password Screen**

4. Enter a new password in the New Password and Confirm Password fields, and then click OK.
5. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

## To configure the disk write mode

1. Open the DVR System tab from the Settings screen, and then click the System tab.
2. Under Disk Write Mode, set the disk overwrite mode to On or Off. The default setting is On. Changing the disk overwrite mode to Off will disable all video recording after the entire hard disk has been written. It is recommended that you use the default setting.
3. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

**NOTE:** Changing the disk write mode does not take effect immediately. The DX4000 writes data to the entire disk before implementing the changed disk write mode. Changing the disk write mode to preserve important video on the hard disk is discouraged. To preserve important video you should back it up to a CD, DVD, or USB flash memory device.

## To disconnect remote agent connections

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Open the DVR System tab, and then click the System tab.
3. Under Connection Status, click the Network Client Manager button. The Network Client Manager dialog box appears and displays a list of connected users.



**Figure 76.** Network Client Manager Dialog Box

4. Use the following commands:

- **Disconnect:** Select a user from the list, and then click the Disconnect button to disconnect a single user.
- **Disconnect All:** Click the Disconnect All button to disconnect all users.
- **Refresh:** Click the Refresh button to update the list of connected users.
- **Close:** Click this button to close the Network Client Manager screen.

### To set the network speed

1. From the remote agent application main screen, click the Setup button  if the Settings screen is not open. The Settings screen appears and the Remote Agent tab is displayed.
2. Open the DVR System tab, and then click the System tab.
3. Under Network, select the network speed that you want to use when the DX4000 communicates with remote agent applications. Slower speeds result in a very slow refresh rate when viewing live video. At 56 Kbps, video transmission slows to one frame every five seconds. This speed is not recommended for viewing live video.
4. Click the Apply button to save the changes and continue to other settings. If you are finished updating settings, click the OK button to close the screen.

## CONTROLLING CAMERAS FROM THE REMOTE AGENT

You can control all cameras attached to the DX4000 from the remote agent application. This includes controlling PTZ movement, adjusting the focus and iris, adjusting color, programming and running patterns, and programming and running presets. If you have cameras that can be programmed through their own on-screen menus, you can use Preset 95 to access these menus. Refer to *To use Preset 95* on page 65 for instructions on accessing and using on-screen menus from the remote agent. For instructions on adjusting the color settings for your cameras, refer to *Camera Settings* on page 57.

### To control PTZ cameras

1. Display live video on the remote agent main screen in single-screen mode.
2. Locate the PTZ controls in the lower-right corner, and then click any of the buttons to reposition the camera.
3. To pan or tilt the camera, click any of the four arrow buttons surrounding the PTZ button.
4. To zoom in or out, click the ZOOM button and then click the + (plus) or - (minus) buttons.



**Figure 77.** PTZ Control Buttons

## To adjust the focus

1. Display live video in single-screen mode on the remote agent main screen.
2. In single-screen mode, select a camera by clicking in the channel video pane or by clicking a camera button at the bottom of the screen.
3. In the remote agent main screen, look for the Focus button on the controls in the lower-right corner of the screen (Figure 77).
4. Click the Focus button, and then click the + (plus) or - (minus) buttons to adjust the focus.

## To adjust the iris

1. In single-screen mode, select the camera for which you want to adjust the iris, and then click the PTZ button on the PTZ controls (Figure 77).
2. Look for the Iris button on the PTZ controls.



**Figure 78.** Adjusting the Iris

3. Click the IRIS button, and then click the + (plus) or - (minus) buttons to adjust the iris.

## To set up a pattern

1. In single-screen mode, select the camera for which you want to set up a pattern, and then click the PTZ button on the PTZ controls (Figure 77). The PTZ buttons expand to display controls for patterns and presets.



**Figure 79.** Setting Up a Pattern

2. Select pattern number 1 in the Pattern list, and then click START. Only one pattern can be programmed from the remote agent. Always select pattern number 1.
3. Use the PTZ control buttons to reposition the camera in the desired pattern. You can use any of the following commands:
  - Pan the camera to the right or left.
  - Tilt the camera up or down.
  - Zoom in or out.
  - Refocus the lens.
  - Adjust the iris by opening or closing it.
4. When you are finished, click STOP. The program is saved in the camera's memory for future use.



**Figure 80.** Completing the Setup for a Pattern

### To run a pattern

1. In single-screen mode display the camera for which you want to run a pattern, and then click the PTZ button on the PTZ controls (Figure 77). The PTZ buttons expand to display controls for patterns and presets.
2. Select a pattern number in the Pattern list, and then click RUN.

### To set up a preset

1. In single-screen mode, select the camera for which you want to set up a preset, and then click the PTZ button on the PTZ controls (Figure 81). The PTZ buttons expand to display controls for patterns and presets.



**Figure 81.** Setting Up a Preset


2. Select a preset number in the Preset list, and then click SET.
3. Use the PTZ control buttons to reposition the camera in the desired position. You can use any of the following commands:
  - Pan the camera to the right or left.
  - Tilt the camera up or down.
  - Zoom in or out.
  - Refocus the lens.
4. When you are finished, click SET again.



**Figure 82.** Completing the Setup for a Preset

### To run a preset

1. In single-screen mode, select the camera channel on which you want to run a preset, and then click the PTZ button on the PTZ controls.

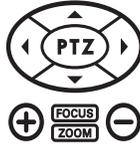

**Figure 83.** PTZ Control Buttons

2. Select the preset number from the Preset list, and then click RUN. The camera adjusts itself to the preset position.

### To use Preset 95

Preset 95 displays the camera menu for Esprit and Spectra cameras. You can use this menu to configure settings on these cameras. Follow these instructions to use Preset 95 and to navigate the camera menus.

1. In single-screen mode, select the camera channel on which you want to run the preset, and then click the PTZ button on the PTZ controls.
2. Enter or select 95 in the preset list, and then click SET. The camera's menu appears on the screen.
3. Navigate through the menu as follows:
  - Click the FOCUS button, and then click the + (plus) or - (minus) buttons to navigate through list of options in a menu or submenu.
  - Click the IRIS button, and then click the + (plus) button to select an option.
  - Click the IRIS button, and then click the - (minus) button to select the EXIT command on the menu. Then click the IRIS button followed by the + (plus) button to exit the menu.
4. After you have completed setting up the camera, navigate to the Exit command, click the IRIS button, and then click + to close the menu.



**Figure 84.** Using Preset 95

## MONITORING LIVE VIDEO FROM THE REMOTE AGENT

You can monitor up to four video channels on the remote agent. By default, the remote agent displays all four channels. Use the following buttons to change the screen layout as follows:



To view a single video channel, click the Single-Screen Mode button.



To view a specific video channel, click one of the four numbered channel buttons located below the video display area.



To rotate through all video channels, click the Sequencing button.



To view all four video channels in quad mode, click the Four-Channel Mode button.

## CONTROLLING AUDIO

With the DX4000 you can listen to audio while viewing live or recorded video.

### To listen to or disable audio

1. Select a video channel, and then click the Mute button  to listen to audio.
2. Click the button again to disable the audio.

**NOTE:** You must enable audio if you want to listen to audio while viewing recorded video.

## CAPTURING LIVE VIDEO FROM THE REMOTE CLIENT

While viewing live video you can save it to the local hard disk drive. Note that audio is not recorded when you save live video from the remote client. Audio is saved when you record video with any type of recording schedule.

1. Display a single channel of live video.
2. Click the Save AVI File button . The displayed video is saved to the local hard disk drive with a name assigned by the remote agent application.


To save several live video clips at once, display up to four channels of live video before you click the Save AVI File button.

# WORKING WITH RECORDED VIDEO ON THE REMOTE AGENT

## SEARCHING FOR RECORDED VIDEO

**NOTE:** To search for recorded video, you must be logged on as an administrator or manager. The operator ID does not have permission to search for recorded video.

1. Click the Search button . The viewing area becomes blank and a search bar appears at the bottom of the screen. Recorded video appears along the search bar over the current day. Click in the date field above the Play button to select a different date.

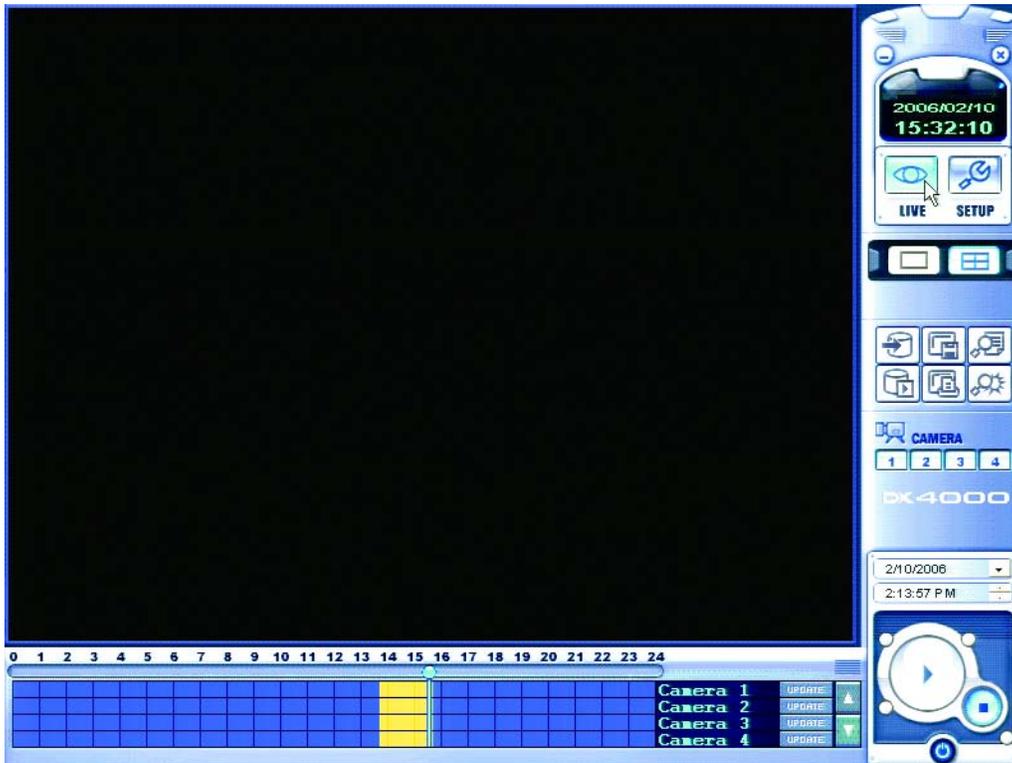


**Figure 85.** Searching for Recorded Video

2. Click a recording to select it, and then click the Play button . Video for all four channels is displayed simultaneously.
3. Use the following buttons to review the recorded video:
  - To view a single channel, click the Single-Screen Mode button .
  - To view a specific channel, first click the Single-Screen Mode button, and then click any of the four numbered channel buttons.
  - To pause the recording, click the Stop button .
  - To resume the recording, click the Play button again.
  - To refresh the list of recorded video, click the Update button next to a camera.

**NOTE:** To listen to audio while playing back recorded video, you must first enable audio while the remote agent is in Live Mode. Refer to *Controlling Audio* on page 66 for more information.

## To search by date or time

1. Click the Log button . The Search Log screen appears.

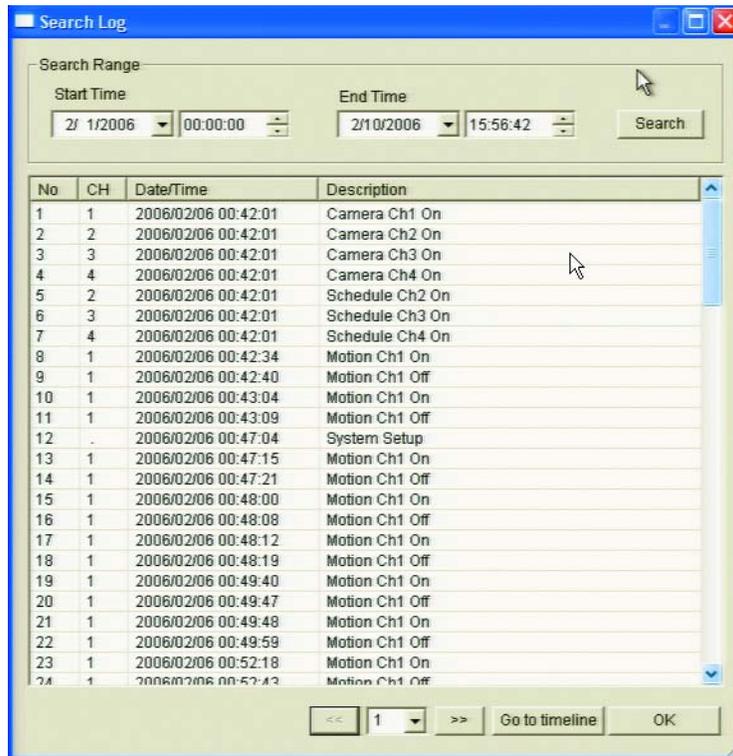

**Figure 86.** Search Log Screen

2. Select a search range, and then click the Search button. Recordings matching your search criteria appear in the list. Lists that are longer than one page contain a page number field at the bottom of the screen. Note that the Search Log screen remains open on the desktop. You can close the screen by clicking the OK button, or you can leave it open so that you can select other recordings later.
3. Select a recording from list, and then click the “Go to timeline” button.
4. Select the recording from the search bar, and then click the Play button  to review the video.

## To search by event

1. Click the Search Events button . The Event Viewer screen appears.

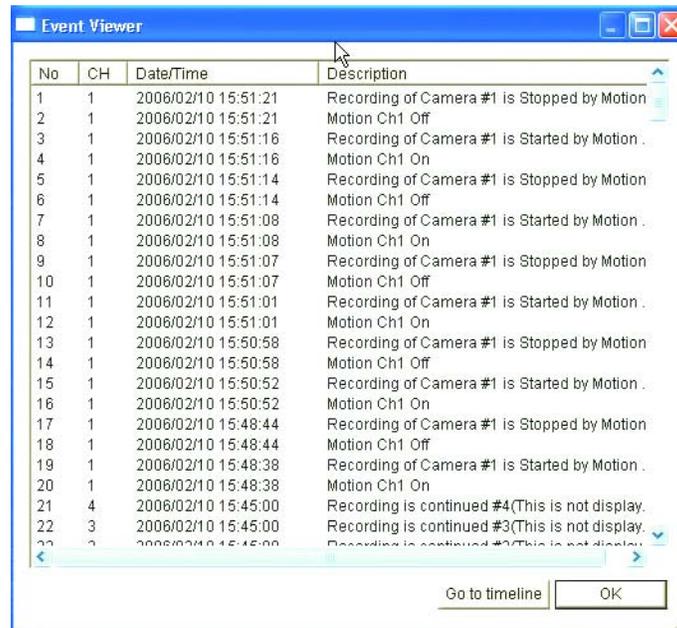


Figure 87. Event Viewer Screen

2. Select an event, and then click the "Go to Timeline" button. Note that the Event Viewer screen remains open on the desktop. You can close the screen by clicking the OK button, or you can leave it open so that you can select other events later.


3. Select the event from the search bar, and then click the Play button  to review the video.

## BACKING UP VIDEO

The remote agent provides several features for backing up video or images. You can back up an entire recording to a CD, DVD, or USB flash memory device; save a snapshot to the hard disk, CD, DVD, or USB flash memory device; or you can print a snapshot.

### To back up video

1. While viewing recorded video, click the Backup button . The Backup screen appears.

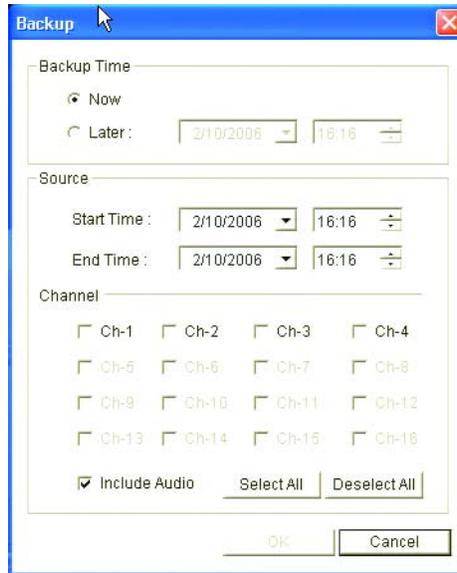


**Figure 88. Remote Agent Backup Screen**

2. Select the backup time, video source, and channels that you want to back up, and then click the OK button. Unless you changed the default directory, the video is copied to the hard disk in the directory C:\Program Files\Pelco\DX4000. To use a different default directory permanently, click the Setup button, open the Remote Agent Settings screen, and then select a different saving directory. Refer to *Configuring the Remote Agent* on page 52 for more information.

### To save a snapshot

1. While viewing recorded video, click the Save Image button . The Save as... dialog box appears.

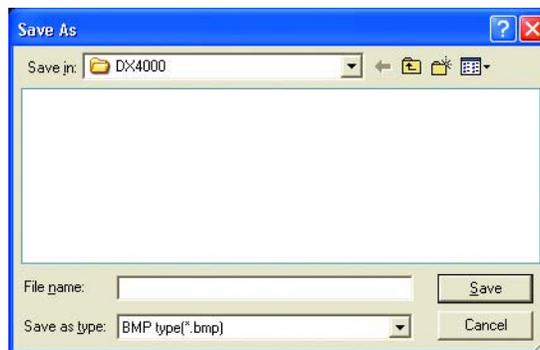

**Figure 89. Saving a Snapshot**

2. Enter a name for the snapshot, and select a file type. Options are BMP type (bmp) and JPG type (jpg).
3. Click the Save button. Unless you changed the default directory, the file is saved in the default directory C:\Program Files\Pelco\DX4000. To save the snapshot in a different directory, click the Browse button next to the "Save in" field before you click Save. To use a different default directory permanently, click the Setup button, open the Remote Agent Settings screen, and then select a different saving directory. Refer to *Configuring the Remote Agent* on page 52 for more information.

4. To view the image file, open it with any viewer program. If you were viewing video in Quad mode, the snapshot will contain all four videos. To save a snapshot of a single video, switch to Single-Screen Mode before you save it.

### **To print a snapshot**

1. While viewing recorded video, click the Print Image button . The Print screen appears.
2. Select a printer and click the OK button. The image is printed on the selected printer. Note that if you were viewing video in Quad mode, the printout will contain all four videos. To print a snapshot of a single video, switch to single-screen mode before you print it.

## VIEWING VIDEO WITH THE BACKUP PLAYER

The DX4000 backup player lets you review video that has been backed up to the hard disk, to a CD or DVD, or to a USB flash memory device. Video backed up from the DX4000 can also be viewed with any media player that supports AVI files. The DX4000 digitally signs video as it is recorded. This digital watermark can be authenticated from the backup player. By verifying the authenticity of video before you play it, you can verify the authenticity of evidence before you present it in court.




Figure 90. DX4000 Backup Player

The main screen of the DX4000 backup player provides access to current system information.

- ❶ **Video viewing area:** Displays the selected video recording.
- ❷ **Authentication button:** Verifies the watermark on the recording. Click this button to verify that the recording is authentic.
- ❸ **Player control buttons:** Click these buttons to minimize, maximize, or close the backup player.
- ❹ **Recording date:** Indicates the start date for the selected recording. Select a different date to jump to a different point in the recording.
- ❺ **Recording time:** Indicates the start time for the selected recording. Select a different time to jump to a different point in the recording.
- ❻ **Video recording title:** Displays the title of the selected video.
- ❼ **Open button:** Displays a list of available recorded video. Click this button to select a video recording to display in the backup player viewing area.
- ❽ **Video control buttons:** Control the video display. Click these buttons to control the video recording. You can start and stop the video, play it fast forward or fast reverse, skip to the beginning or end of the recording, or skip to the next or previous marked event on a continuous recording.
- ❾ **Video speed control slide:** Change the fast forward or fast reverse speed. Hold down the mouse button on this slider to change the speed to the desired setting while viewing the video in fast forward or fast reverse. The speed changes up to 200 times faster than normal speed.

## To view recorded video with the backup player

1. From the remote agent application, click the Play Backup Video button . The backup player appears. Refer to Figure 90.
2. Click the "Open file" button. The following screen appears.

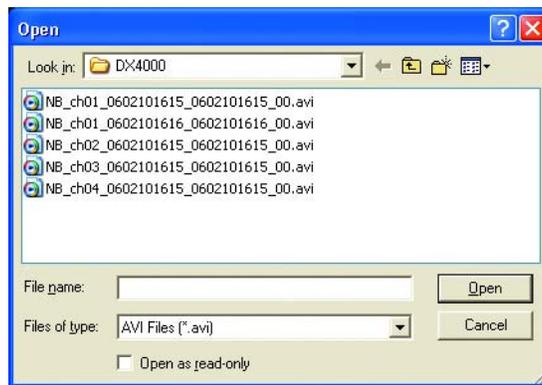

**Figure 91.** Selecting Backup Video

3. Select a video recording and click Open. If the video you want to display is not listed, select a different folder. The video is displayed on the backup player screen.
4. Use the video control buttons to play the video. You can start and stop the video, play it fast forward or fast reverse, skip to the beginning or end of the recording, or skip to the next or previous marked event on a continuous recording.
5. To close the backup player, click the Exit button in the upper right corner of the screen.

## To authenticate recorded video with the backup player

The backup player can verify if any tampering has occurred to recorded video.


1. Select a recorded video clip to view.
2. Click the Authenticate button. Refer to Figure 90.
3. A message appears on the screen. If the file is authentic, the following message appears. If not, an error message appears stating that the file is invalid.



**Figure 92.** Authenticating Recorded Video

# About the Web Client

The DX4000 web client provides remote access to the DX4000 so that you can monitor live video across the Internet. To search for or play back recorded video or to update system settings, you must use the remote agent or the controls on the front panel of the DX4000. For instructions on installing the web client, refer to the installation manual.

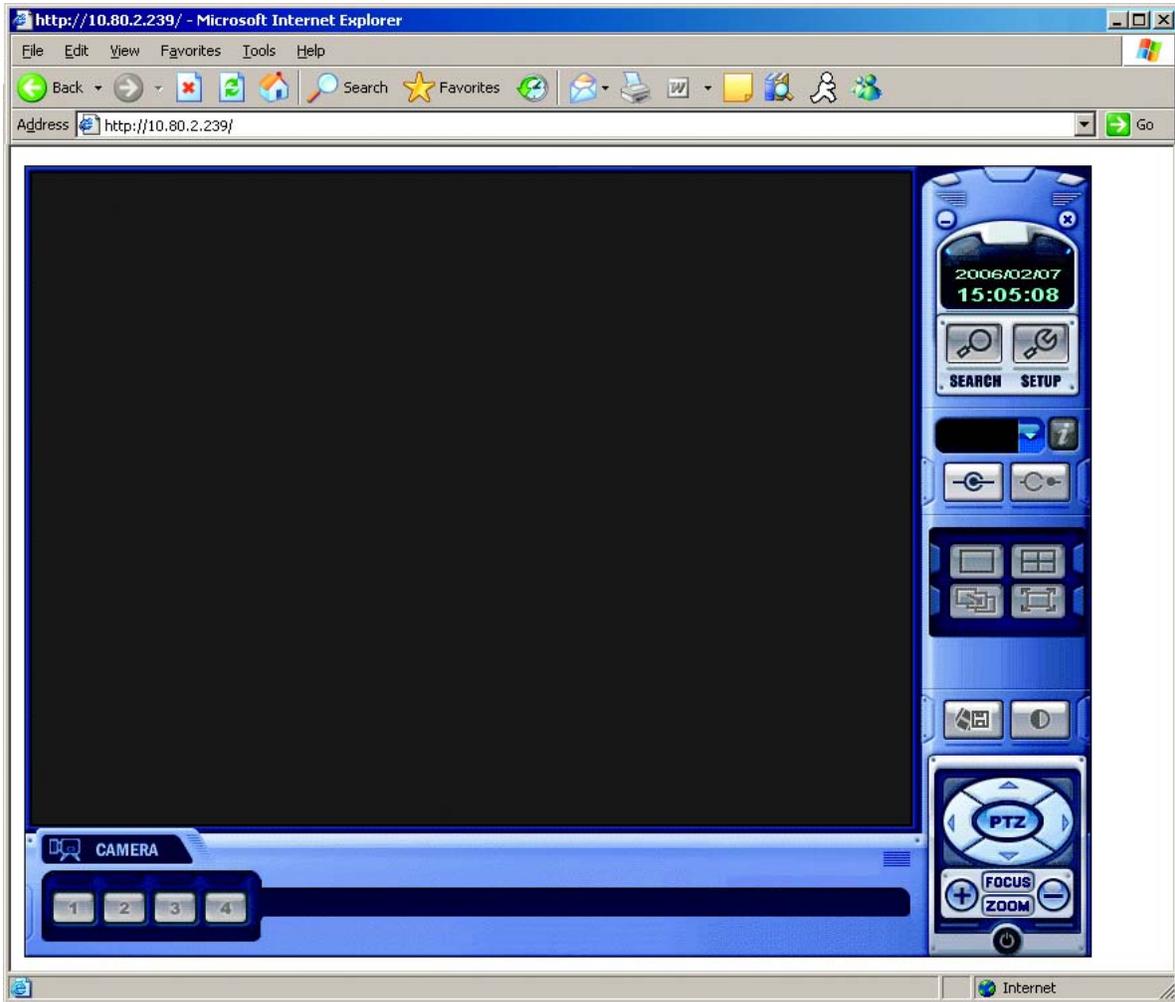

**Figure 93.** DX4000 Web Client

## STARTING THE WEB CLIENT

It is recommended that you log on to the DX4000 from the web client with either the Manager or the Operator user profile. If you log on with the Administrator user profile while someone else is already using this profile, you will disconnect that session.

Do not start the web client on a computer on which the remote agent application or the backup player is already running.

1. From an open Internet Explorer window, start the DX4000 web client in one of the following ways:
  - Select a shortcut from the Favorites menu.
  - Enter the IP address for the DX4000 in the Address field, and then click Go.

2. Click the Connect button . The Login dialog box appears.



**Figure 94.** Web Client Login Dialog Box

3. Enter a different port number only if the port for the DX4000 is different from the default number.
4. Select a user ID, enter a password, and then click the OK button. Live video is displayed on the screen. You can change the screen display from single-screen mode to quad mode. You can also select a specific channel by pressing any of the four numbered channel buttons located below the video.
5. When you are finished reviewing video, click the Disconnect button  to close the application.



**Figure 95.** Monitoring Video with the Web Client



## PRODUCT WARRANTY AND RETURN INFORMATION

### WARRANTY

Pelco will repair or replace, without charge, any merchandise proved defective in material or workmanship **for a period of one year** after the date of shipment.

Exceptions to this warranty are as noted below:

- Five years on fiber optic products and TW3000 Series unshielded twisted pair transmission products.
- Three years on Spectra® IV products.
- Three years on Genex® Series products (multiplexers, server, and keyboard).
- Three years on Camclosure® and fixed camera models, except the CC3701H-2, CC3701H-2X, CC3751H-2, CC3651H-2X, MC3651H-2, and MC3651H-2X camera models, which have a five-year warranty.
- Three years on PMCL200/300/400 Series LCD monitors.
- Two years on standard motorized or fixed focal length lenses.
- Two years on Legacy®, CM6700/CM6800/CM9700 Series matrix, and DF5/DF8 Series fixed dome products.
- Two years on Spectra III™, Esprit®, ExSite®, and PS20 scanners, including when used in continuous motion applications.
- Two years on Esprit and WW5700 Series window wiper (excluding wiper blades).
- Two years (except lamp and color wheel) on Digital Light Processing (DLP®) displays. The lamp and color wheel will be covered for a period of 90 days. The air filter is not covered under warranty.
- Eighteen months on DX Series digital video recorders, NVR300 Series network video recorders, and Endura™ Series distributed network-based video products.
- One year (except video heads) on video cassette recorders (VCRs). Video heads will be covered for a period of six months.
- Six months on all pan and tilts, scanners or preset lenses used in continuous motion applications (that is, preset scan, tour and auto scan modes).

Pelco will warrant all replacement parts and repairs for 90 days from the date of Pelco shipment. All goods requiring warranty repair shall be sent freight prepaid to Pelco, Clovis, California. Repairs made necessary by reason of misuse, alteration, normal wear, or accident are not covered under this warranty.

Pelco assumes no risk and shall be subject to no liability for damages or loss resulting from the specific use or application made of the Products. Pelco's liability for any claim, whether based on breach of contract, negligence, infringement of any rights of any party or product liability, relating to the Products shall not exceed the price paid by the Dealer to Pelco for such Products. In no event will Pelco be liable for any special, incidental or consequential damages (including loss of use, loss of profit and claims of third parties) however caused, whether by the negligence of Pelco or otherwise.

The above warranty provides the Dealer with specific legal rights. The Dealer may also have additional rights, which are subject to variation from state to state.

If a warranty repair is required, the Dealer must contact Pelco at (800) 289-9100 or (559) 292-1981 to obtain a Repair Authorization number (RA), and provide the following information:

1. Model and serial number
2. Date of shipment, P.O. number, Sales Order number, or Pelco invoice number
3. Details of the defect or problem

If there is a dispute regarding the warranty of a product which does not fall under the warranty conditions stated above, please include a written explanation with the product when returned.

Method of return shipment shall be the same or equal to the method by which the item was received by Pelco.

### RETURNS

In order to expedite parts returned to the factory for repair or credit, please call the factory at (800) 289-9100 or (559) 292-1981 to obtain an authorization number (CA number if returned for credit, and RA number if returned for repair).

All merchandise returned for credit may be subject to a 20% restocking and refurbishing charge.

Goods returned for repair or credit should be clearly identified with the assigned CA or RA number and freight should be prepaid. Ship to the appropriate address below.

*If you are located within the continental U.S., Alaska, Hawaii or Puerto Rico, send goods to:*

Service Department  
Pelco  
3500 Pelco Way  
Clovis, CA 93612-5699

*If you are located outside the continental U.S., Alaska, Hawaii or Puerto Rico and are instructed to return goods to the USA, you may do one of the following:*

If the goods are to be sent by a COURIER SERVICE, send the goods to:

Pelco  
3500 Pelco Way  
Clovis, CA 93612-5699 USA

If the goods are to be sent by a FREIGHT FORWARDER, send the goods to:

Pelco c/o Expeditors  
473 Eccles Avenue  
South San Francisco, CA 94080 USA  
Phone: 650-737-1700  
Fax: 650-737-0933

 **Green** The materials used in the manufacture of this document and its components are compliant to the requirements of Directive 2002/95/EC.



This equipment contains electrical or electronic components that must be recycled properly to comply with Directive 2002/96/EC of the European Union regarding the disposal of waste electrical and electronic equipment (WEEE). Contact your local dealer for procedures for recycling this equipment.

### REVISION HISTORY

Manual #	Date	Comments
C2602M	4/06	Original version.
C2602M-A	6/06	Added more instructions and revised errors in descriptions of some features.
C2602M-B	2/07	Added model numbers, added DVD-RW support, corrected permissions and pattern recording steps.
C2602M-C	3/07	Corrected printing errors. Added instructions for iris control from the remote agent.

Pelco, the Pelco logo, Camclosure, Esprit, ExSite, Genex, Legacy, and Spectra are registered trademarks of Pelco. Endura is a trademark of Pelco.

ATI and Radeon are trademarks or registered trademarks of ATI Technologies, Inc. in Canada, the United States and/or other countries.

Intel and Pentium are registered trademarks of Intel Corporation in the United States and/or other countries.

NVIDIA and GeForce are registered trademarks of NVIDIA Corporation.

Matrox is a registered trademark of Matrox Graphics, Inc. in Canada, the United States and/or other countries.

©Copyright 2007, Pelco. All rights reserved.



Worldwide Headquarters  
3500 Pelco Way  
Clovis, California 93612 USA

USA & Canada  
Tel: 800/289-9100  
Fax: 800/289-9150

International  
Tel: 1-559/292-1981  
Fax: 1-559/348-1120

**[www.pelco.com](http://www.pelco.com)**

**ISO9001**

Australia | Canada | Finland | France | Germany | Italy | Macau | The Netherlands | Russia | Singapore  
South Africa | Spain | Sweden | United Arab Emirates | United Kingdom | United States